



Qumi Q38

User Manual

用戶手冊

用戶手冊

Manual del usuario

Manuel de l'utilisateur

Benutzerhandbuch

Руководство пользователя

Manuale d'uso

ユーザーマニュアル

Preface

Copyright

©2017 Vivitek. **vivitek**® is a trademark of Delta Electronics, Inc. All other trademarks are the property of their respective owners. All values, weights and sizes in this Manual are approximate values. Specifications are subject to change without notice.

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Important Safety Information

Important:

It is strongly recommended that you read this section carefully before using Qumi. These safety and usage instructions that will make sure you enjoy many years of safe use of Qumi. Keep this manual for future reference.

Symbols Used

Warning symbols are used on the unit and in this manual to alert you of hazardous situations.

The following symbols are used to call attention to important information.

Note:

Provides additional information on the topic at hand



Important:

Provides additional information that should not be overlooked.



Caution:

Alerts you to situations that may damage the unit.



Warning:

Alerts you to situations that may damage the unit, create a hazardous environment, or cause personal injury..

Throughout this manual, component parts and items in the OSD (On-Screen Display) menus are denoted in bold font as in this example:


“Press the **Menu** button on top of the projector or remote control to open the **Setting** menu”.

General Safety Information

- Do not open the casing. There are no user-maintainable parts inside the machine. For any maintenance, please contact a qualified service technician.
- Follow all warnings and precautions on the machine or in this Manual.
- According to its design, the projection light source is extremely bright. To avoid harm to your eyes, do not look straight at the lens when the LED is ON.
- Do not place the machine on unstable surface or stand.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- Do not place any heavy objects (e.g., books or bags) on the unit.

Qumi Installation Notice

- Allow at least a 500mm (20") clearance around the exhaust vent.

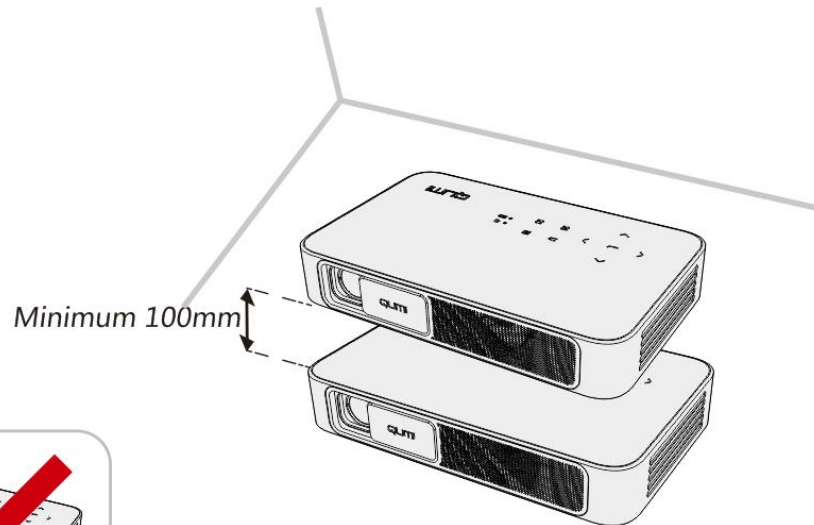

- Make sure that the intake vents do not recycle hot air from the exhaust vent.
- When operating Qumi in an enclosed space, make sure that the surrounding air temperature within the enclosure does not exceed operating temperature while Qumi is running, and the air intake and exhaust vents are unobstructed.
- All enclosures should pass a certified thermal evaluation to make sure that Qumi does not recycle exhaust air, as this may cause the device to shut down even if the enclosure temperature is within the acceptable operating temperature range.

 **Caution:** Avoid usage of Qumi in dusty environments.

Power Supply Safety

- Only use the supplied adapter.
- Do not place anything on the cord. Place the cord where it will not be in the way of foot traffic.
- Remove the battery from the remote control when storing or not in use for a prolonged period.

Cleaning Qumi

- Before cleaning, disconnect the power supply cables. See “*Cleaning Qumi*” on Page 43.

Note: Qumi will be warm after usage. Allow Qumi to cool down before storing away.

Control Warning

Before installing and using Qumi, read the regulatory notices in the *Regulatory Compliance* on page 52.

Symbol Explanations



DISPOSAL: Do not use household or municipal waste collection services for disposal of electrical and electronic equipment. EU countries require the use of separate recycling collection services.

Main Features

- FullHD 1080p (1920 x 1080) resolution with a maximum resolution of WUXGA (1920 x 1200) on HDMI port
- UHD 4K video playback support on Android OS
- Up to 600 lumens of brightness and 10,000:1 contrast for brilliant and sharp images.
- Enjoy a big bright 130” (diameter) high definition projection from only 3.5m (12.5ft) from the projection surface.
- Long life energy efficient LED light source with up to an estimated 30,000 hours of operation.
- Advanced Quad-Core CPU running an Android™ operating system.
- Wirelessly stream and project documents, photos, movies and other content with the integrated wireless system from an iOS and Android™ smartphone or tablet
- Built-in 3w (x2) stereo loudspeakers with audio-out for easy connection to other audio devices

About this Manual

This manual is intended for end users and describes how to install and operate Qumi. Wherever possible, relevant information—such as an illustration and its description—has been kept on one page. This printer-friendly format is both for your convenience and to help save paper, thereby protecting the environment. It is suggested that you only print sections that are relevant to your needs.

Table of Contents


Preface	2
Important Safety Information	3
Main Features	5
Chapter 1 At a Glance	7
Overview	7
Standard Accessories.....	9
Remote Control	10
Setting Up the Remote Control.....	11
Chapter 2 Getting Started	12
What you need	12
Setting Up Qumi	13
Chapter 3 Qumi Home Screen	17
Views	17
Photo	20
Video.....	21
Music	22
Document	23
App Store.....	24
Browser.....	25
My Apps.....	26
WiFi.....	27
Mirroring Setup	28
Settings.....	32
Chapter 4 On-Screen Display (OSD) Settings	33
OSD Menu Controls	33
OSD Language Settings.....	35
Chapter 5 Taking Care of Your Qumi	46
Cleaning Qumi	46
Cleaning the Lens.....	46
Troubleshooting	47
Vivitek Support Site	50
Specifications.....	51
Projection Distance vs Projection Size.....	52
Projection Distance and Size Table	52
Timing Mode Table	53
Qumi Dimensions	54
Regulatory Compliance	55
Safety Certifications.....	55
Disposal and Recycling	55




Chapter 1 At a Glance

Overview

Front/Top/Right View

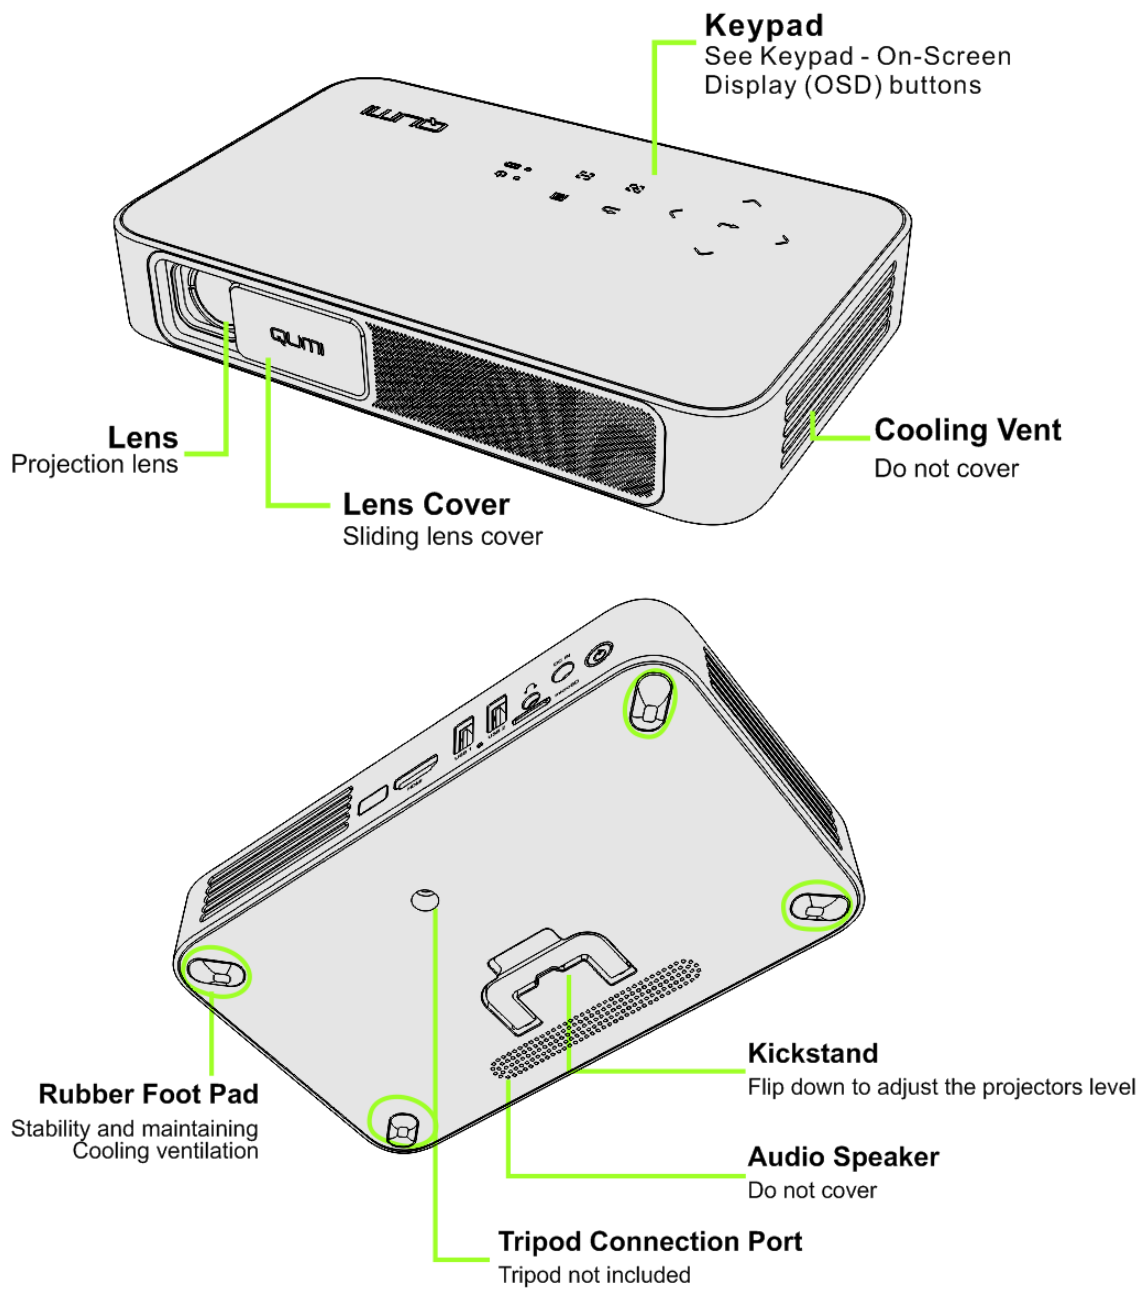

Rear/Top/Left View

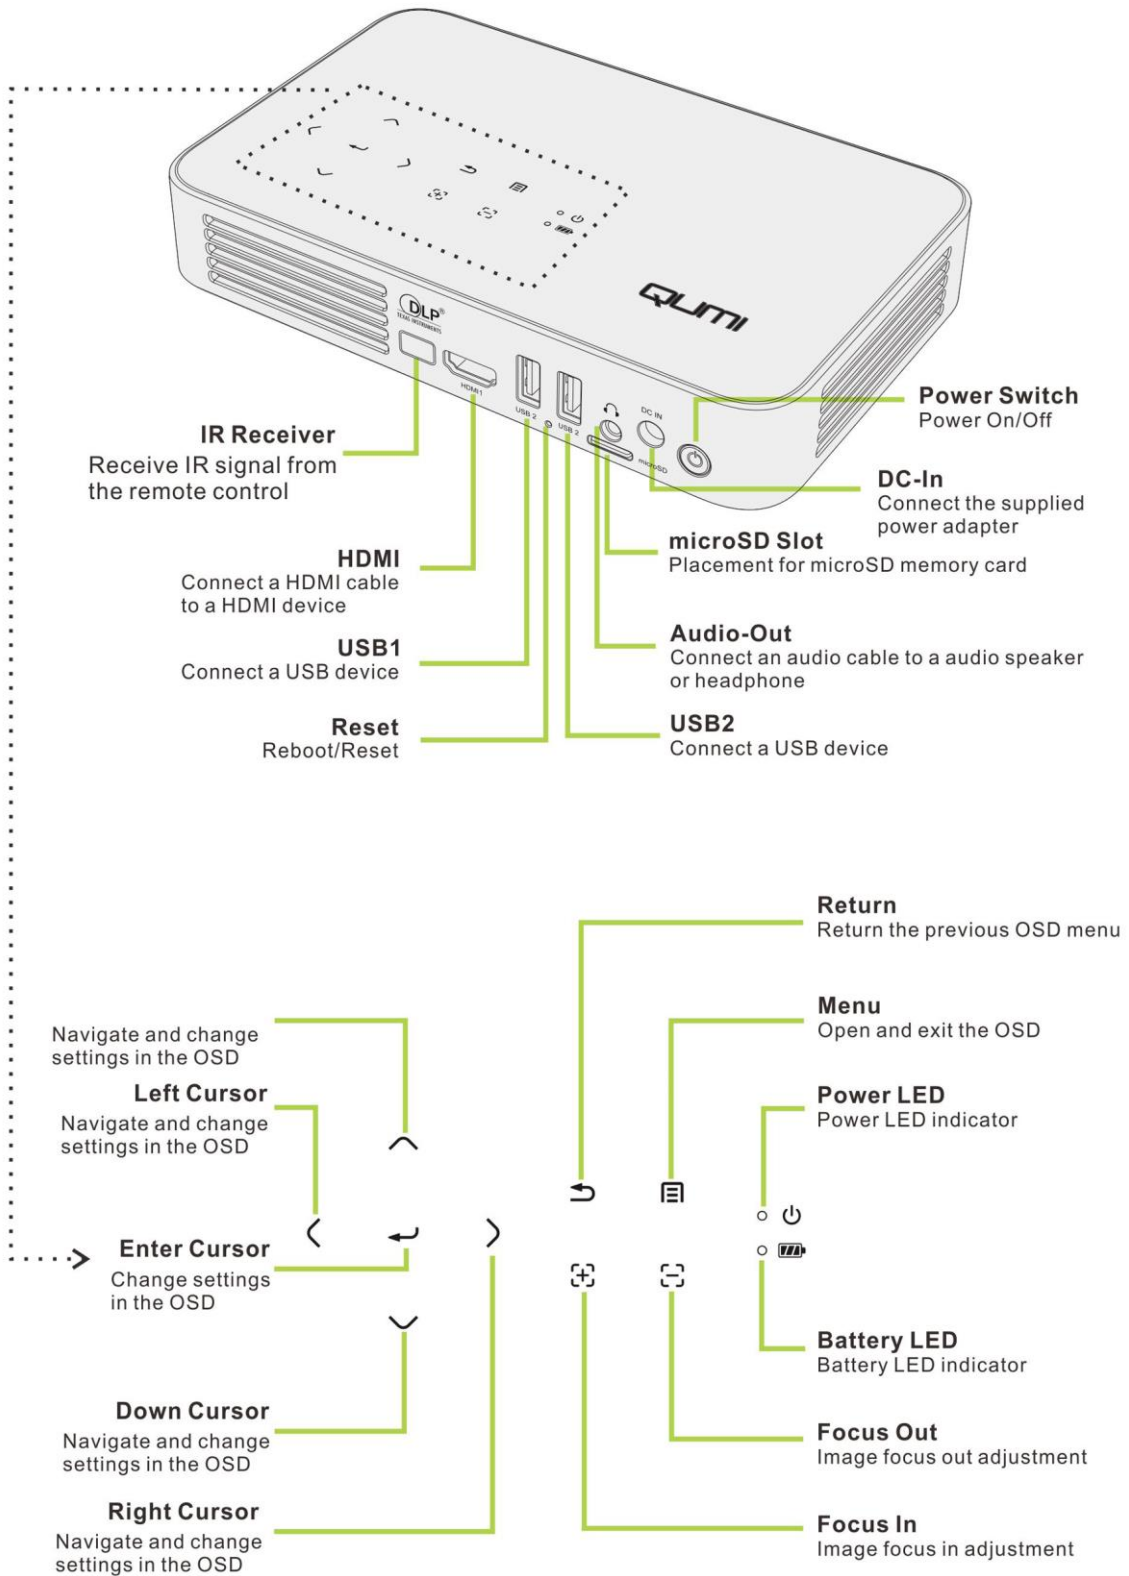

Standard Accessories

 
Along with Qumi, the following accessories are include in the box:



Remote Control (with one 3V CR2025 battery)



Regional Power Cord and Power Adapter



Documentation Kit*
(Quick Start Guide, Warranty Card)



Standard HDMI cable


*Note: The user manual is located inside the projector's internal memory:

1. Projector's internal memory:
 - Home Screen → My Apps → File Brower → Local Disk → Qumi_Q38_User_Manuals
2. Visit Vivitek website
 - www.vivitekcorp.com:
 - i. Select country or region of choice to download user manual

Contact your dealer immediately if any items are missing, appear damaged, or if the unit does not work. It is recommended that you keep the original packing material in case you ever need to return the equipment for warranty service.




Remote Control

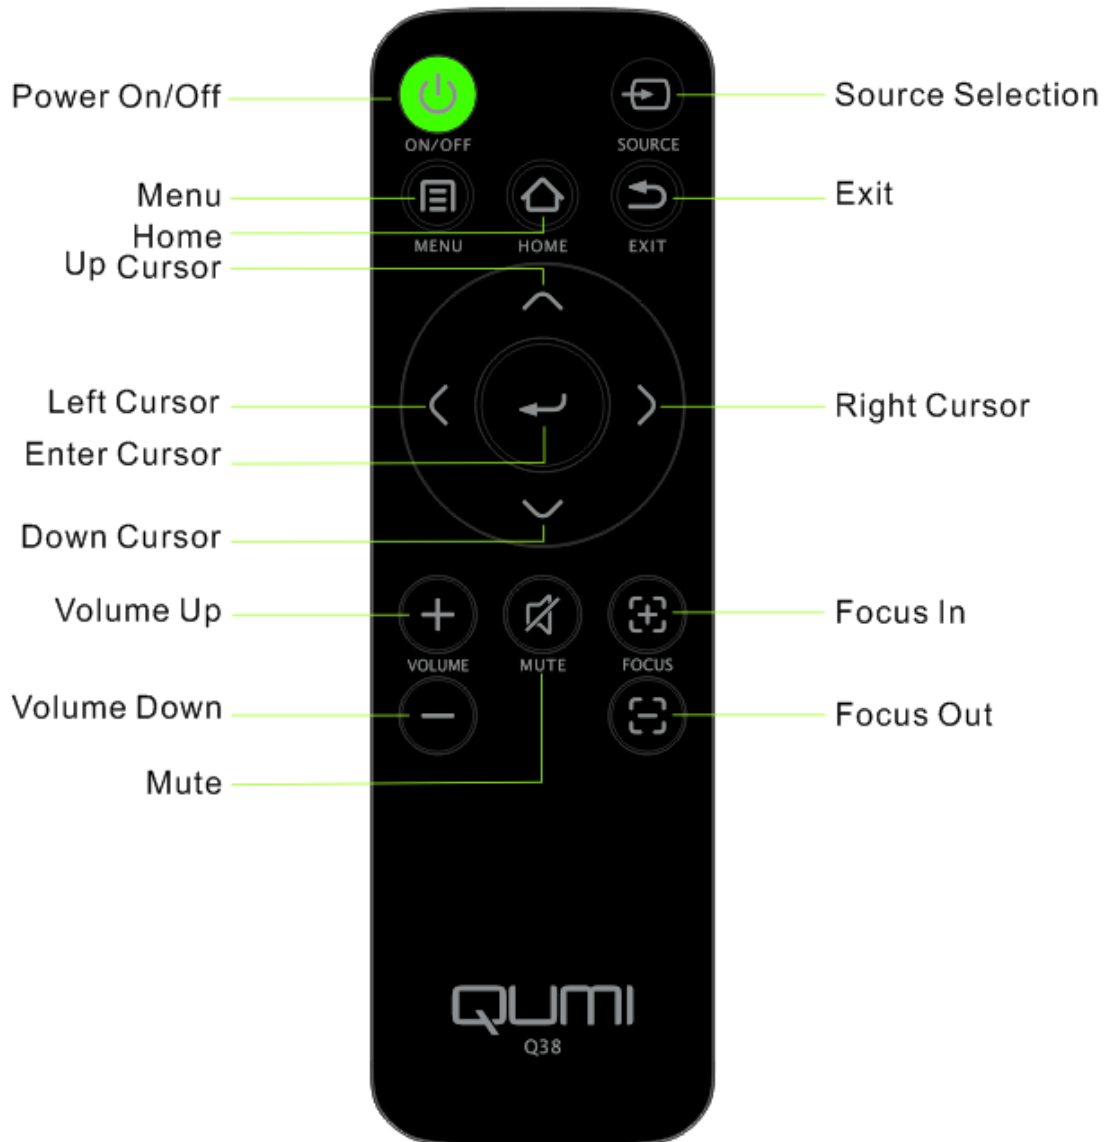

Setting Up the Remote Control




The remote control comes with one (1) 3V lithium battery (CR2025). The battery is pre-installed in the remote control.

To begin using the remote control, remove the plastic tab (A) from the battery compartment.

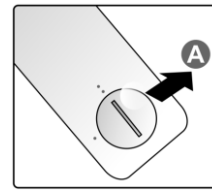

Replacing the Remote Control's Battery

- 1** Remove the battery compartment cover by turning the cover towards the arrow (A). Then lift the cover out towards the arrow (B)..
- 2** Remove the old battery and insert the new battery with the positive side facing up.
- 3** Install the cover and turn as shown in the illustration.

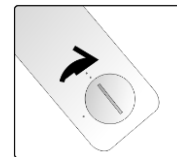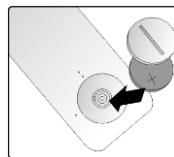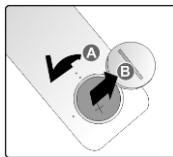

Caution:

- 1. Only use 3V lithium battery (CR2025).*
- 2. Dispose of used batteries according to local ordinance regulations.*
- 3. Remove the battery when not using Qumi for prolonged periods.*

Operating Range

The remote control uses infrared (IR) transmission to control Qumi. It is necessary to point the remote directly at Qumi.

The remote control functions properly within a radius of approximately 7 meters (23 feet) and 15 degrees above or below the Qumi level (If the remote is not held perpendicular to the sides or rear of Qumi).

If Qumi is unresponsive to the remote control, move closer towards Qumi.

Note:


The remote control's Power On button won't switch on the projector when the Power Adapter isn't connected to the Qumi.

Chapter 2 Getting Started

What you need

Qumi can be connected to many types of external devices and peripherals. To play music, connect Qumi to an external or portable music player. To play films, connect Qumi to a DVD player, Blu-Ray player or media player.— To display files and other types of media, connect Qumi to peripherals like a personal computer via the provided HDMI cable or a USB drive.


These devices can be connected to Qumi using an appropriate cable. Make sure that the connecting device has an appropriate output connector.

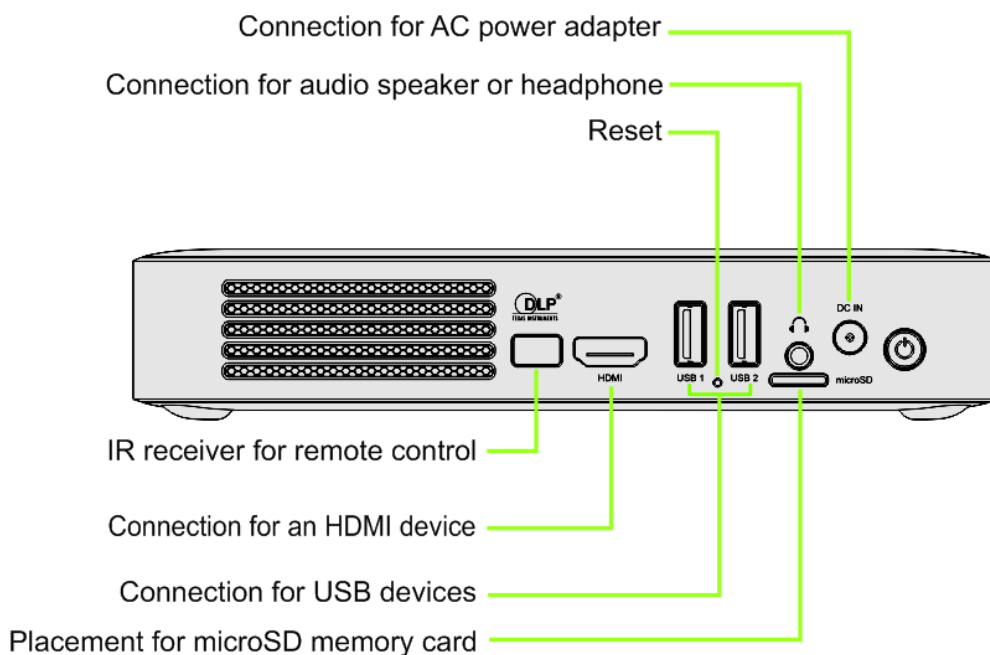

Setting Up Qumi


Connecting Peripherals by HDMI

Connect HDMI-compatible peripherals to Qumi using an HDMI cable (Included).

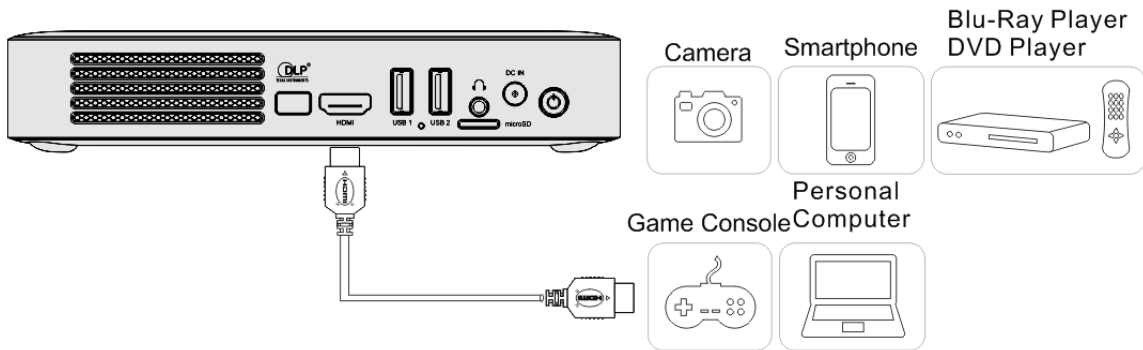

Inserting a USB device or microSD Card


Connect a USB device (USB Flash Drive, Keyboard, Mouse) or microSD card to the Qumi by inserting the desired device (s) into the appropriate port.

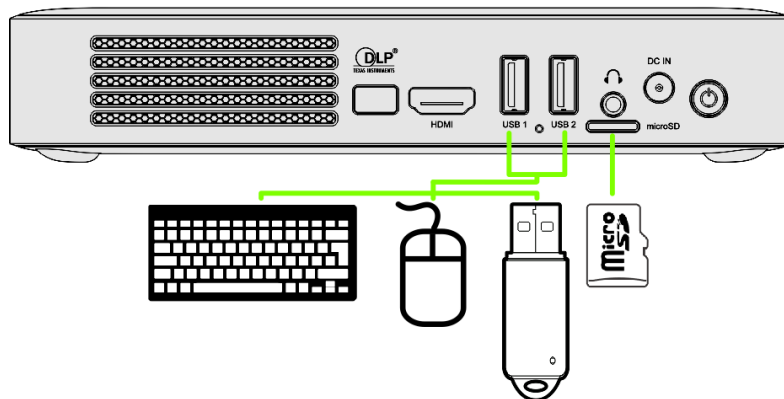

Connecting Audio

Connect earphones or speaker to Qumi by inserting into the Audio-in port.

Bluetooth Audio out is also available under Settings, Bluetooth. Turn Bluetooth "ON" and pair audio device.

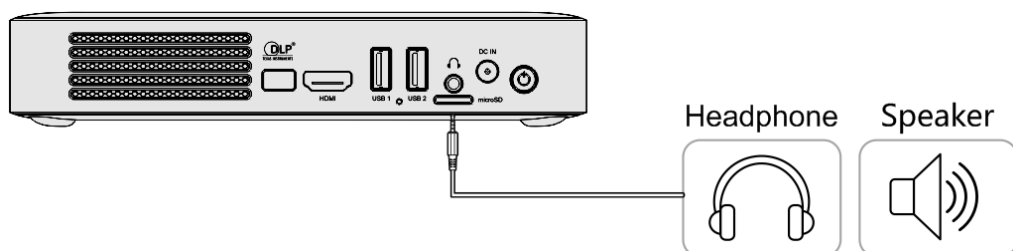


Charging the Battery

Follow the below steps to charge Qumi:

Connect the AC power adapter to Qumi.

Connect the other end of AC power adapter to a wall outlet.

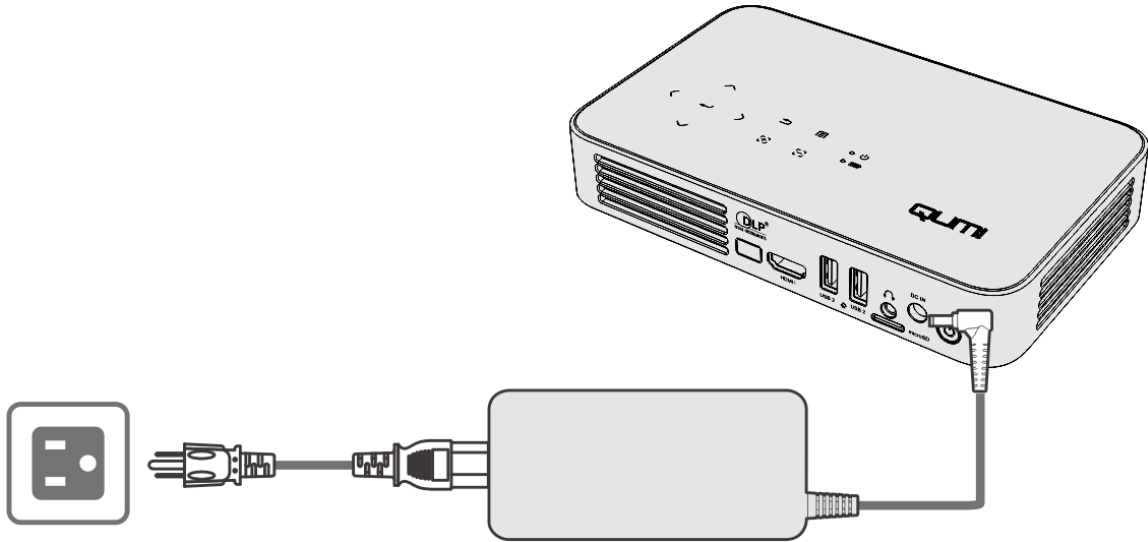

Notes:

The battery will be fully charged in about 3 to 4 hours.

LED Light Description


- *Power LED (Blue) – Power on*
- *Battery LED (Green) – Battery is fully charged*
- *Battery LED (Red) – Battery is charging (Blinking light means low battery)*

Starting and Shutting Down Qumi

- 1** Connect the AC power adapter to Qumi. Connect the other end of AC power adapter to a wall outlet.


Note:

The adapter models may differ between countries.

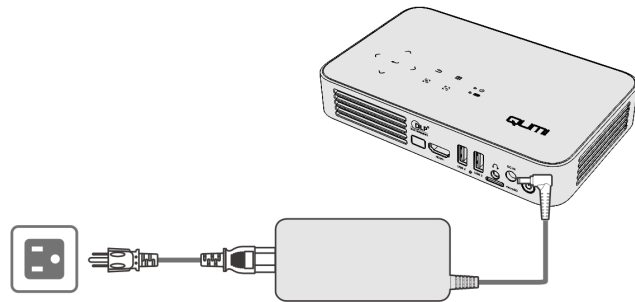

- 2** Press  power button to turn on Qumi.

- When AC power adapter is connected, press the power button for 1 second.
- When AC power adapter is not connected, press the power button for 5 seconds.

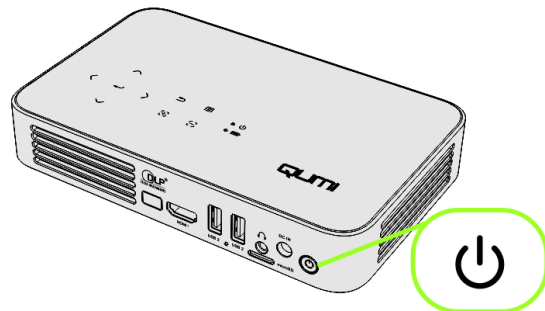


Qumi splash screen displays and connected devices are detected but not displayed.





3. If several input devices are connected, repeatedly press the SOURCE selection (signal source) button on the remote to toggle through connected inputs.


- HDMI
- Android



4. Press  power button to power off Qumi.

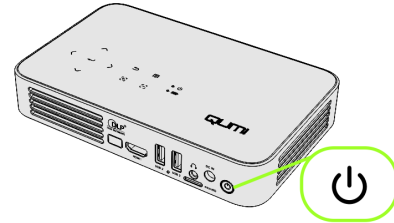


5. When the “Power off” message appears, please press the power button again . The projector will turn off.

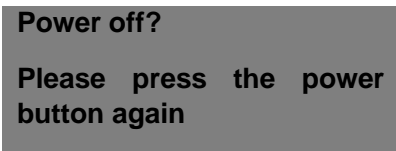

Adjusting the Projector Level

Flip down the kickstand to adjust the projector level.

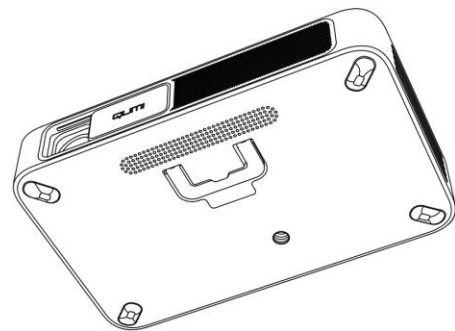


Using a Tripod

Qumi can be used with a tripod by connecting the tripod to the bottom of Qumi. Many typical tripods can be connected.

Supported Tripod Specifications:


- Socket size: 1/4-20 L6.3mm

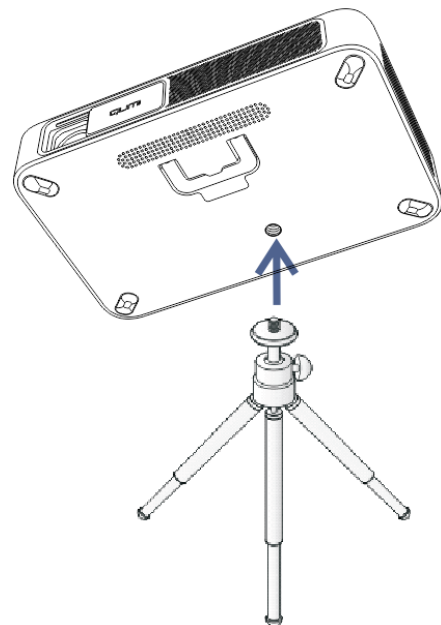

Chapter 3 Qumi Home Screen

Views

The Qumi Q38 Home Screen is designed as the starting point for accessing all of the projector's key functions and features. The Home Screen helps provide ease-of-use for conveniently operating and configuring the projector. It displays the main functions, app links, and notification bar. The Home Screen also allows for direct access to media files from a smart device (smartphones or tablets), microSD card or USB drives for a complete media experience.

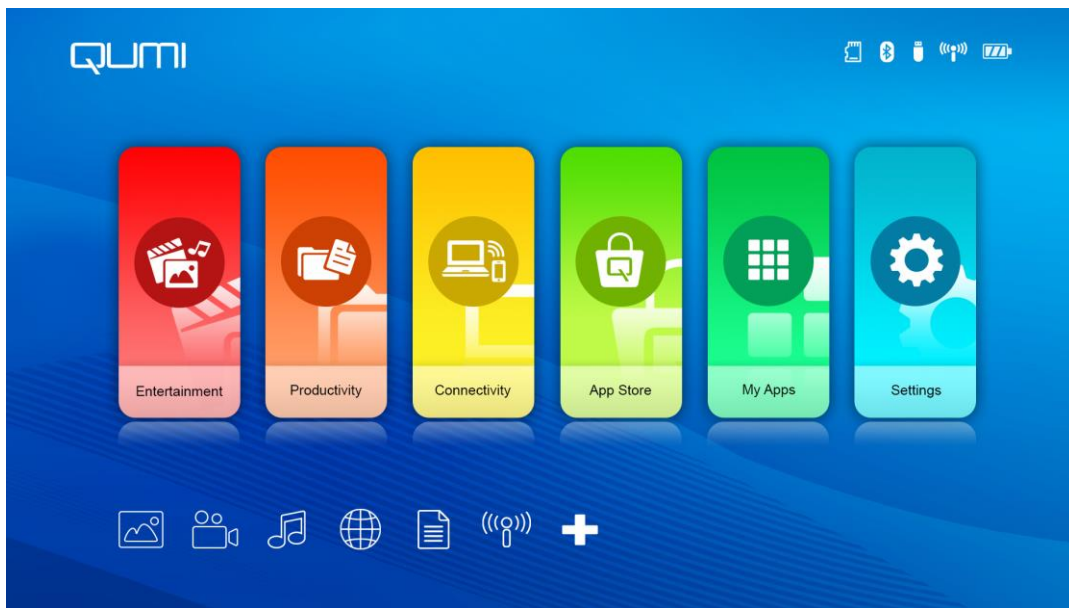

The Home Screen is made up of three (3) sections and includes Main Functions, Quick Access Links and Notification Bar:

Main Functions


The Main Functions panel is placed directly in the center of the screen for accessing all of the projector's key functions for Entertainment, Productivity, Connectivity, App Store, My Apps and Settings. The contents of Entertainment, Productivity and Connectivity can be customized and updated based on the user's preference.



- **Entertainment** - Apps or tools for entertainment are placed here. The Apps that appear here can be customized and updated based on the user's preference.
- **Productivity** - Apps or tools for working or being productive are placed here. The Apps that appear here can be customized and updated based on the user's preference.
- **Connectivity** - Apps or tools for connecting other devices via WiFi or Bluetooth are placed here. The Apps that appear here be customized and updated based on the user's preference.
- **App Store** – Manage downloads, updates and access to the App Store.
- **My Apps** – Manage and operate all applications related to Qumi.
- **Settings** – Access to a variety of settings including Display, Sound, WiFi, HotSpot, Bluetooth, Storage, General, Application and System.

Quick Access Links


The Qumi includes a Quick Access Links panel on the bottom left of the screen. This panel provides access to commonly used applications and system settings like Photo, Video Music, Browser, Documents and more. The Apps that appear in the Quick Access Shortcuts can also be customized and updated based on the user's preference.

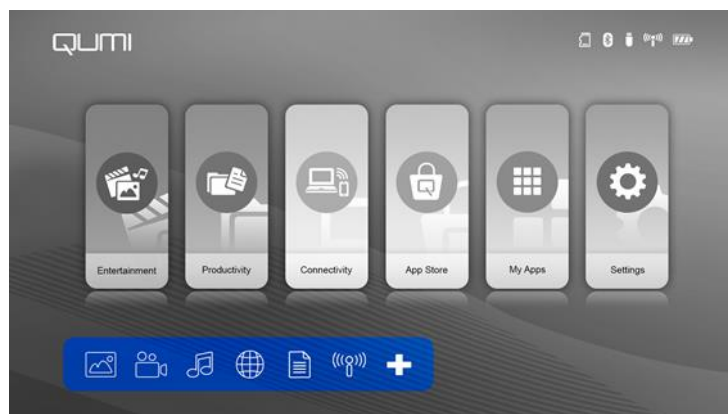

- **Photo** - Display photos and provides slide show functionality from files listed in the "Photo" menu or stored in the internal memory, microSD card or connected USB drive.
- **Video** - Play videos from files listed in the "Video" menu or stored in the internal memory, microSD card or connected USB drive.
- **Music** - Play audio from files listed in the "Audio" menu or stored in the internal memory, microSD card or connected USB drive.
- **Browser** - Navigate the web with the built-in browser.
- **Document** - Display document files listed in the "Document" menu or stored in the internal memory, microSD card or connected USB drive.
- **WiFi** - Setup and manage wireless connections.

Notification Bar



Notification Bar appears on the top right of the screen. The notification icons indicate the Qumi connectivity status.

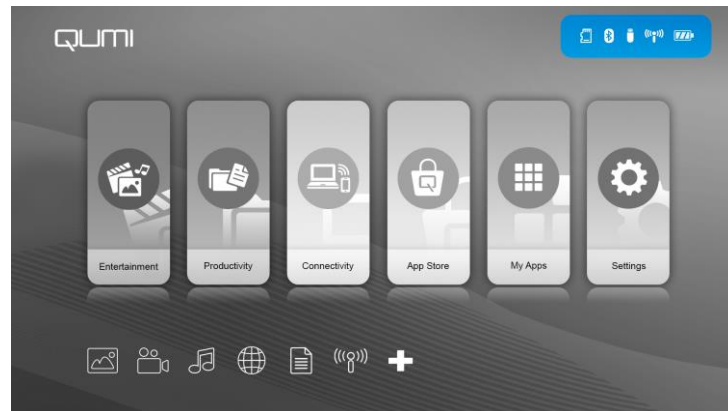





- microSD Card Icon – microSD card is inserted.
- Bluetooth Icon – Bluetooth function is activated.
- USB Drive Icon – USB flash drive is inserted.
- WiFi Icon – WiFi is connected.
- Power/Battery Icon – Power is connected or battery power level.

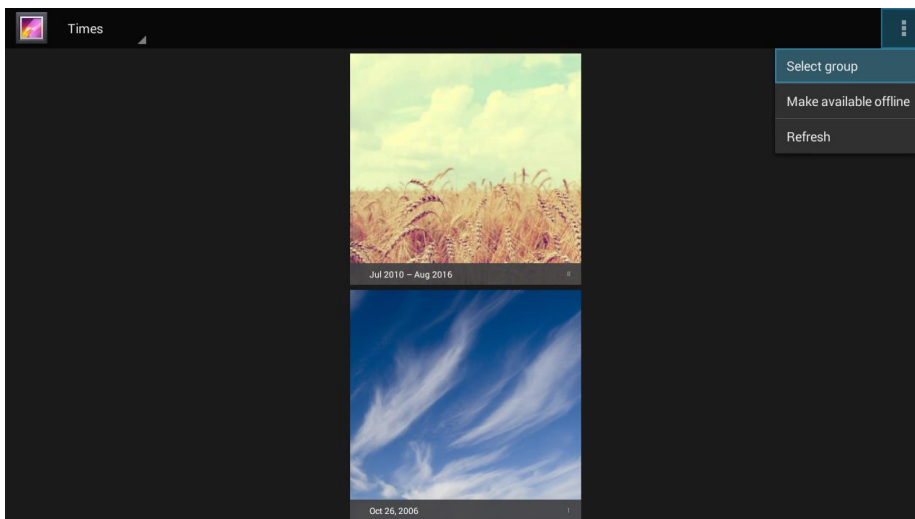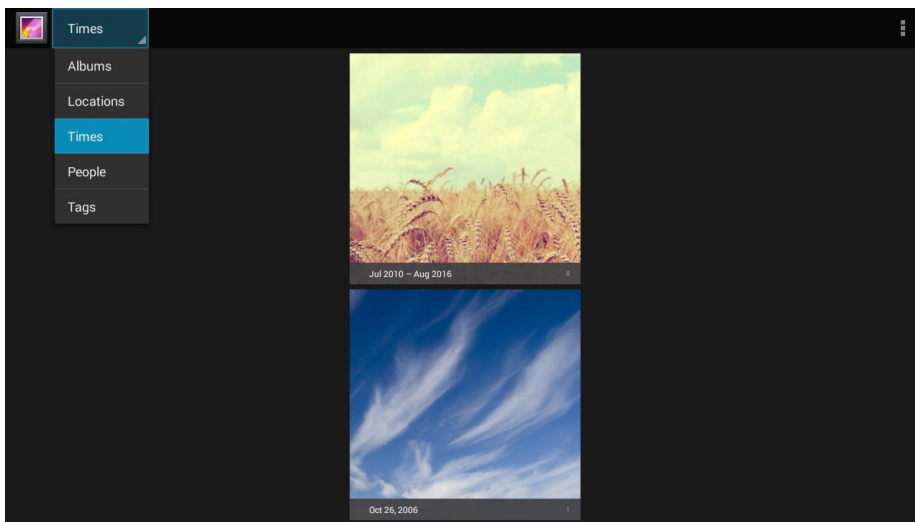Photo

The available images in the connected USB drive, microSD card or Internal Memory are listed in the Photo menu.







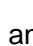

Press \wedge , \smile , \langle and \rangle buttons on top of the projector or remote controller to select files and press \leftarrow to display the chosen file. The control panel display will change based on the file. The table below lists the available functions.



Menu Bar/Icon	Description
	Albums, Locations, Times, People, Tags
1. 	Select album, Make available offline, Refresh
	Filmstrip View, Grid View
2. 	Delete, Slideshow, Edit, Crop, Set picture as, Details, Print

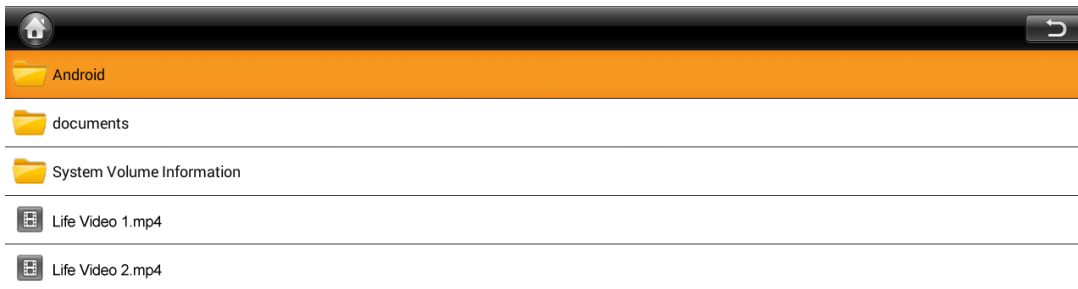Video

Available videos in the connected USB drive, microSD card or Internal Memory are listed in the Video menu.





Press , ,  and  buttons on top of the projector or the on the remote controller to select files and press  to display the chosen file. The control panel display will change based on the file. The table below lists the available functions.






Menu Bar/Icon	Description
	Return to main menu
	Return to previous window



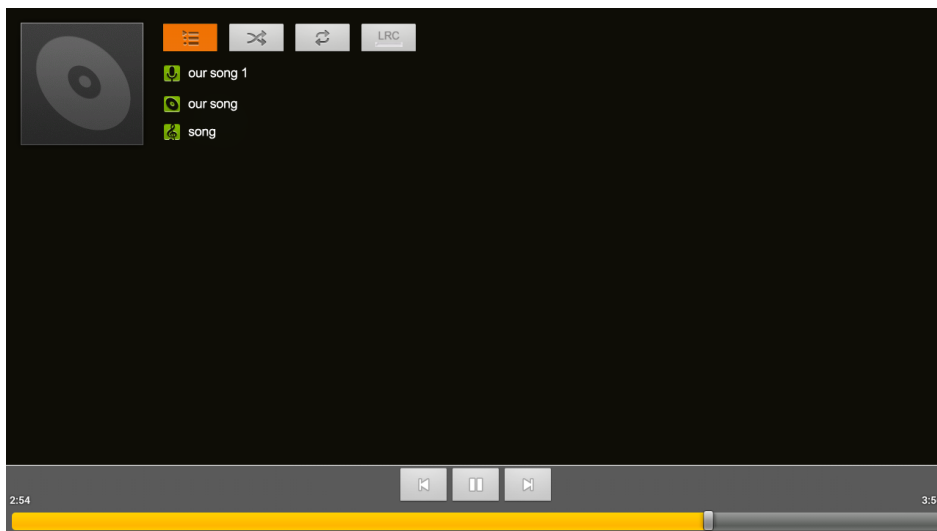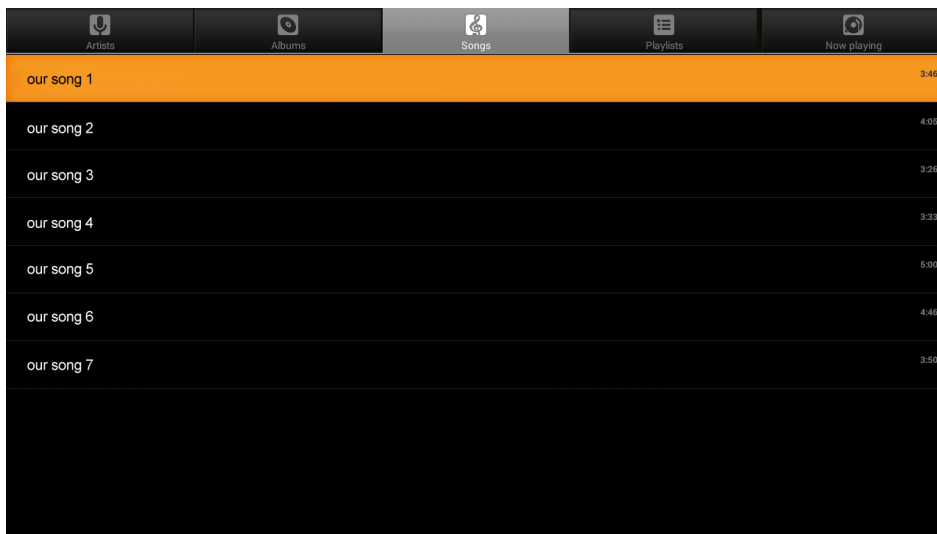



Music

Available music in the connected USB drive, microSD card or Internal Memory are listed in the Music menu.









Press , ,  and  buttons on top of the projector or buttons on the remote controller to select files and press  to display the chosen file. The control panel display will change based on the file. The table below lists available functions

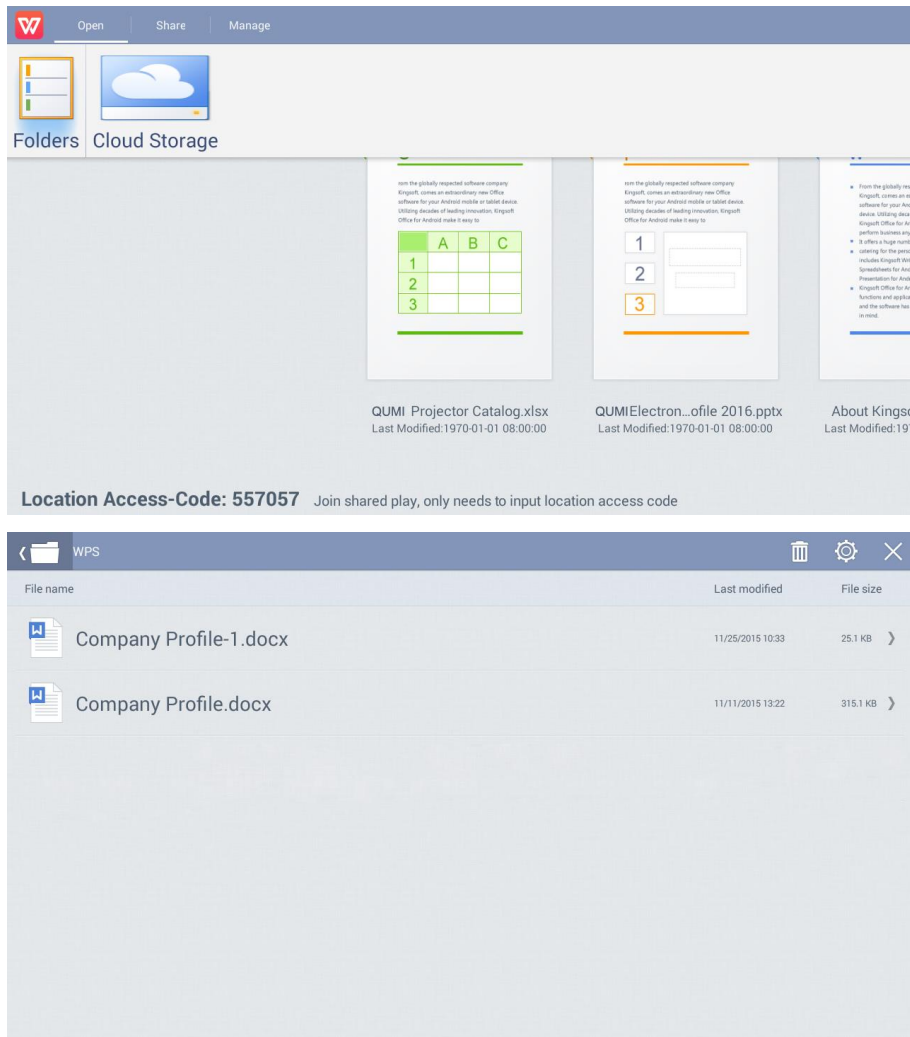

Menu Bar/Icon	Description
	Playlists
	Shuffle is on/Shuffle is off
	Repeat all songs/Repeat current song/Repeat is off
	Lyrics (LRC)

Document

Available documents in the connected USB drive, microSD card or Internal Memory are listed in the Document menu.



Press , ,  and  buttons on top of the projector or the on the remote controller to select files and press  to display the chosen file. The control panel display will change based on the file. The table below lists the available functions.


Menu Bar/Icon	Description
Open	Folders, Cloud Storage
Share	Send Cloud, Join Shareplay, More
Manage	Duplicate, Delete, Erase Record
	Delete
	Sort by: File Name, Modify Time (Refresh)






App Store

Manage downloads, updates and access to the APP Store.

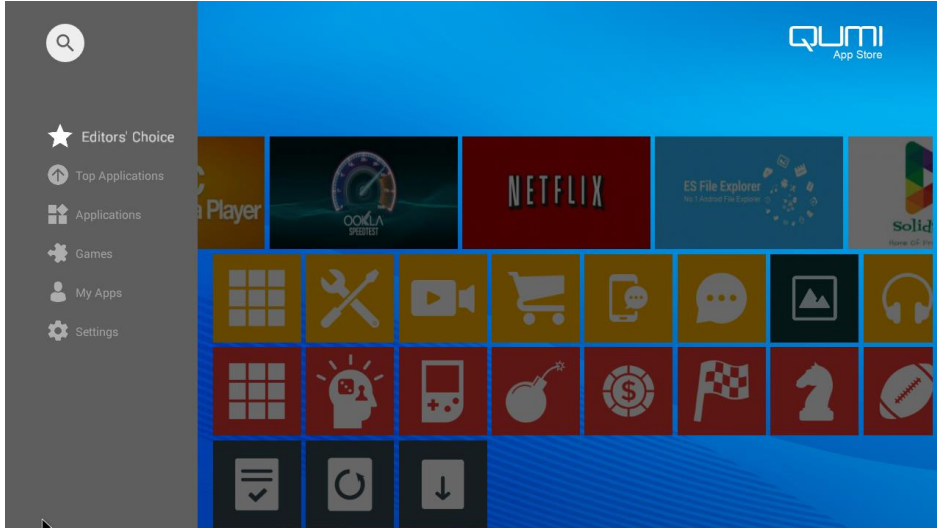

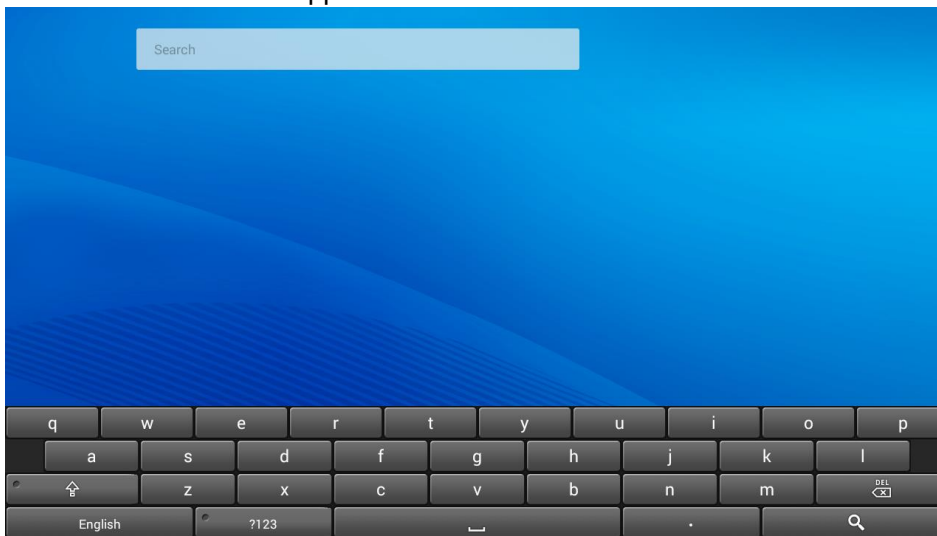


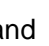

Search for the desired App.






Browser

Navigate the web with the built-in browser.



Press , ,  and  buttons on top of the projector or the remote controller to select files and press  for display. The control panel display will change based on the file. The table below lists available functions.


Menu Bar/Icon	Description
	Bookmark this page
	Search or type URL
	Find local bookmark

Notes:

When navigating the web with the built-in browser, it's recommended to connect a USB mouse and keyboard to Qumi.

My Apps

Manage and operate all applications installed on Qumi.

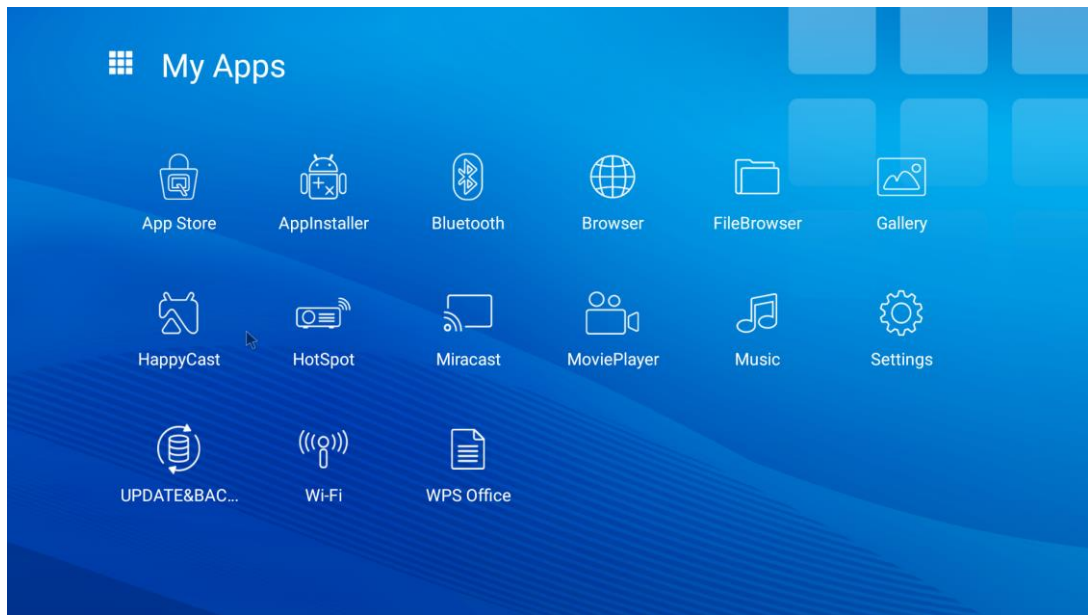


Applications downloaded through the App Store will be show in the My Apps drawer.


WiFi



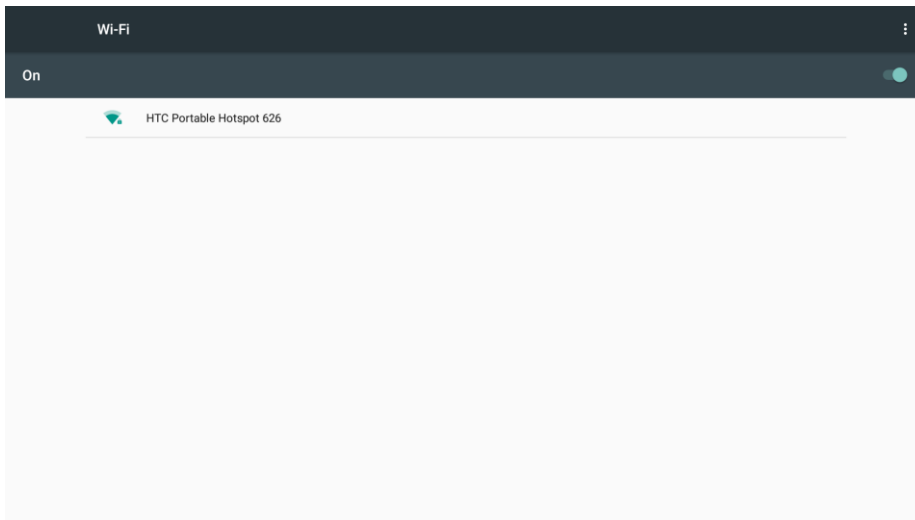


Setup and manage wireless connections (Example: Tablet, Smartphone)



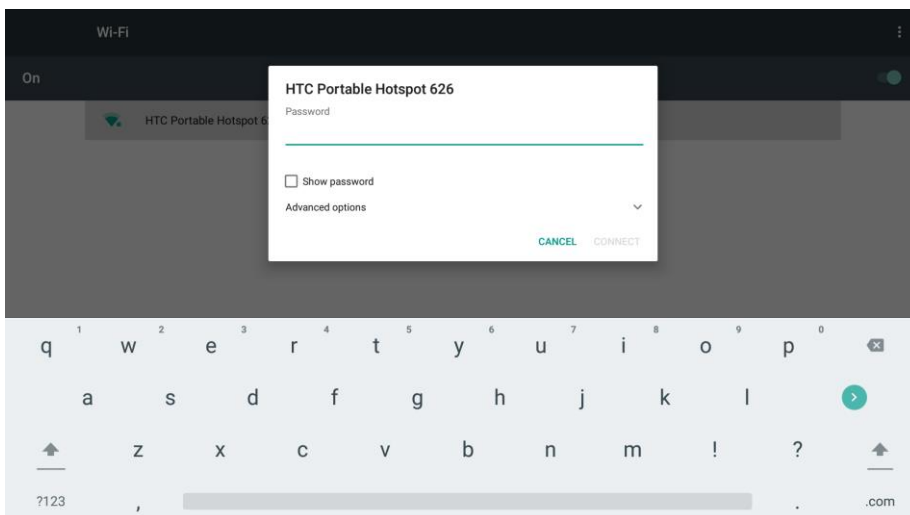

Enable WiFi -- Select network name



Input user name and password -- Click Connect



Press , ,  and  buttons on top of the projector or the remote controller to select files and press  for display. The control panel display will change based on the file. The table below lists available functions.

Menu bar/Icon	Description
	Turn On or Off WiFi
	Refresh (Available Networks)
	Add Network
	Scan, WPS PIN Entry, Wi-Fi Direct, Advanced



Mirroring Setup

This feature will allow the wireless mirroring of connected personal computers, smartphones and tablets (iOS/MacOS/Windows/Android operating systems) to the Qumi Q38 without requiring any physical cables. The Qumi Q38 supports 3 types of mirroring technology and this includes AirPlay with AirReceiver, Google Cast with AirReceiver and Miracast.

- **AirPlay with AirReceiver**
 - AirPlay with AirReceiver lets you wirelessly stream content from an iOS or MacOS device to the Qumi Q38.
- **Google Cast with AirReceiver**
 - Google Cast with AirReceiver lets you wirelessly cast your Android smartphone/tablet's content or Chrome Browser to the Qumi Q38.
- **Miracast**
 - Miracast is a wireless display that will let you wirelessly cast content from your Android smartphone or tablet to the Qumi Q38.

Compatibility

System OS	Version No.	Device Types	Suitable Mirroring Technology
iOS	Up to v11.2	iPhone Series, iPad Series	AirPlay with AirReceiver
MacOS	Up to v10.12	MacBook Series	AirPlay with AirReceiver
WindowsOS	Up to Windows 10	PCs running Windows	Google Cast with AirReceiver
AndroidOS*	Up to v7.1.1	Smartphones, Tablets	Google Cast with AirReceiver, Miracast

**Note: As of December 2017, major brands and models of Android smartphone and tablets have been tested, however we can't guarantee interoperability of all brands and models on the market with the Qumi Q38.*

Known Limitations

1. *Some live-streaming applications, like Netflix, do not work with AirReceiver.*

- *Some live streaming applications, such as Netflix, Amazon Video, HBO Go, YouTube and most sports/TV apps, either use their own custom protocol or prevents connections that are not originating from an iOS or MacOS device. Some of the service providers behind these applications also prevent an Apple TV to display content over AirPlay. We are currently researching into ways of adding this support into future versions of AirReceiver. In some instances, you might be able to mirroring and stream content to another device.*

2. *Unable to stream DRM protected movies from iTunes.*

- *Does not support streaming of DRM protected movies from iTunes.*




1. iOS/MacOS device setup for AirPlay with AirReceiver

Note: The AirReceiver application is defaulted to always be on, so no need launch it.


A. Connect your iOS/MacOS Smartphone/Tablet/PC and Qumi Q38 to the same office or home wireless network.

- B. There is no need to download the AirReceiver App to your iOS/macOS Smartphone/Tablet/PC.
- C.
 - a. On your iOS Smartphone/Tablet, slide up from the bottom of the screen to display the control console. The AirPlay button should appear, then click on it. Select the suitable device to switch on the screen mirroring. In this case, the name will appear as "Vivitek".
 - b. On your MacOS PC, activate the status menu from the top right-side of the screen to display the Status menu. The screen mirroring button should appear, then click on it. Select the suitable device to switch on the screen mirroring. In this case, the name will appear as "Vivitek".


iOS Device Setup

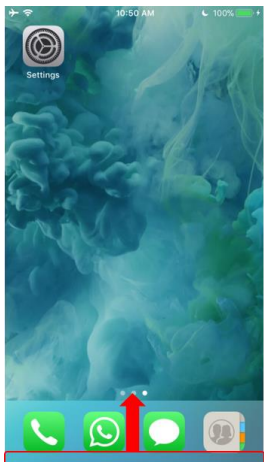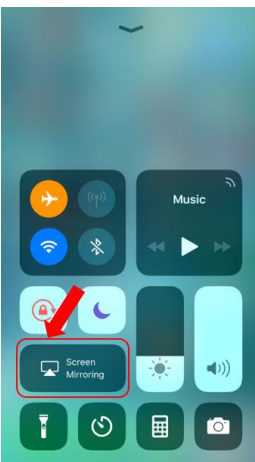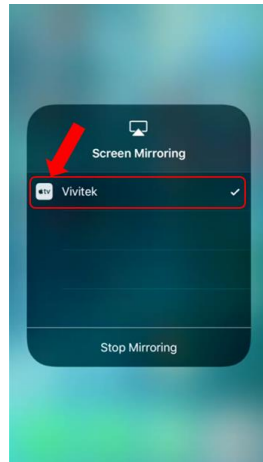Activate the control console.	Click the screen-mirroring button.	Select the suitable device to start mirroring.
		

MacOS Device Setup

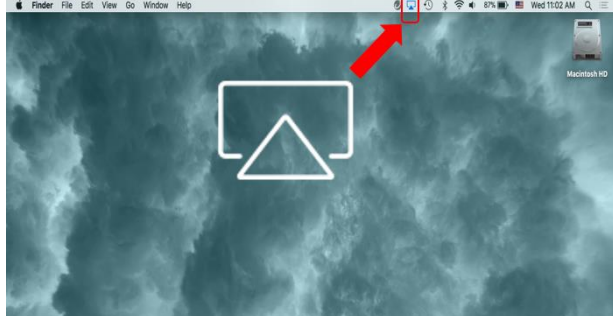Activate the status menu and click the screen mirroring button.

Select the suitable device to start mirroring.

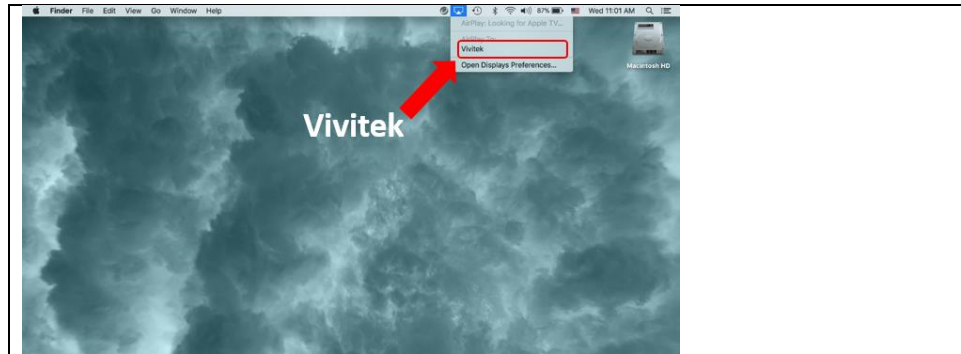



D. Now you should be connected and mirroring your iOS/macOS device's content to the Q38

2. .AndroidOS device setup for Google Cast with AirReceiver

Note: The AirReceiver application is defaulted to always be on, so no need launch it.

- A. Connect your AndroidOS Smartphone/Tablet and Qumi Q38 to the same office or home wireless network.
- B. On your Android Smartphone/Tablet, launch the Google Cast function. Select the suitable device to switch on the screen mirroring. In this case, the name will appear as "Vivitek".

Reminder: Every Android Smartphone/Tablet brand has a different name to describe their "GoogleCast" function. Check your Smartphone/Tablet's user manual or call the brand's service center to find out what "GoogleCast" is called.

- C. Now you should be connected and mirroring your AndroidOS device's content to the Q38.

3. Miracast setup for Android devices.

Note: Miracast is only compatible with selected Android Smartphones/Tablets.

- A. Connect your Android Smartphone/Tablet and Qumi Q38 to the same office or home wireless network.
- B. Launch the Miracast App on the Q38. The application can be found in the Connectivity folder on the Homescreen.



- C. Connect the Android Smartphone/Tablet to the Projector
 - i. Launch the Smartphone/Tablets mirroring feature and make sure to enable the wireless display feature.
 - ii. Search for the Projector. In this case, the Projector device name is: Android_XXXX (Example)
 1. At the same time, look on the projector and you will see a message saying that the Smartphone/Tablet is trying to connect to the Projector. Accept the invitation and the mirroring display will start the connection process.

Reminder: Every Android Smartphone/Tablet brand has a different name to describe their “Miracast” function. Check your Smartphone/Tablet’s user manual or call the brand’s service center to find out what “Miracast” is called.


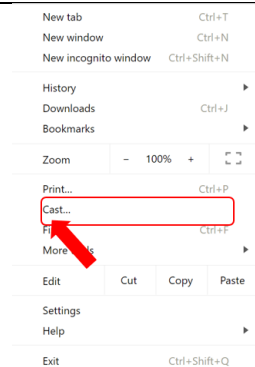
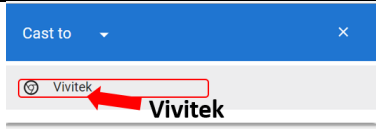
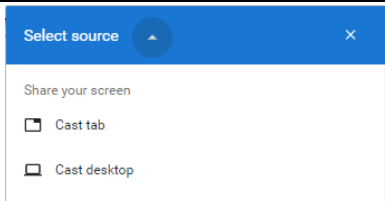
- D. Now you should be connected and mirroring your Android Smartphone / Tablet’s content to the Q38.

4. WindowsOS device setup for Google Cast with AirReceiver

Note: The AirReceiver application is defaulted to always be on, so no need launch it.

- A. Connect your WindowsOS PC and Qumi Q38 to the same office or home wireless network.
- B. On your WindowsPC, launch the Chrome Browser and click on the 3-Dot icon and choose the “Cast” feature from the drop down menu. Select the suitable device to switch on the screen mirroring. In this case, the name will appear as “Vivitek”. Google Cast will allow you to mirror the Chrome Window or the computer desktop.


WindowsOS Device Setup






Launch Chrome.

Choose “Cast” feature from the menu

Select the suitable device to start mirroring.

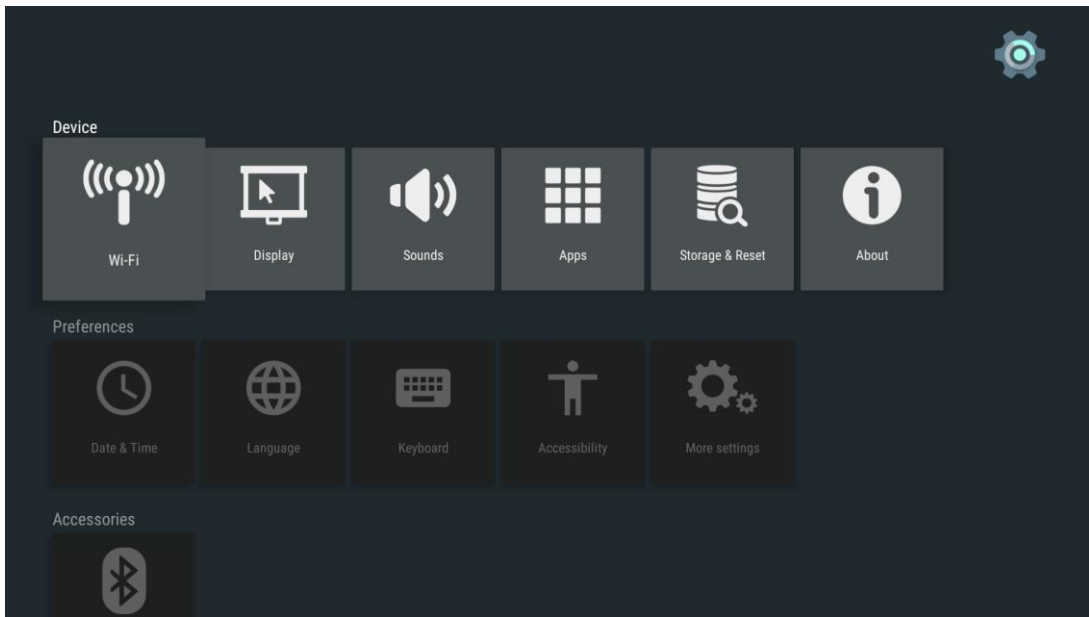Cast either the Chrome Window or the computer desktop.

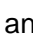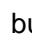


Settings

Access to a variety of settings including Wi-Fi, Display, Sounds, Apps, Storage, Bluetooth, System and more.



Press , ,  and  buttons on top of the projector or on the remote controller to select files and press  for display. The control panel display will change based on the file. The table below lists available functions.

Category	Menu Bar/Icon	Description
Device	Wi-Fi	Setup and Manage Wireless Connections
	Display	Screen Resolution, Screen Position, Daydream
	Sounds	System Sounds
	Apps	Downloaded Apps, System Apps, Running Apps
	Storage & Reset	Device Store, Internal Storage, Reset, Factory Data Reset
	About	System Update, Device Name, Legal Information, Model, Android Security Patch Level, Version
Preferences	Date & Time	Automatic Date & Time, Date, Time
	Language	Select Device Languages
	Keyboard	Current Keyboard, Configure
	Accessibility	Captions, Services, Text-To-Speech
	More Settings	Additional System Settings
Accessories	Bluetooth	Setup and Manage Bluetooth Devices
Personal	Location	Location Status, Recent Location Requests
	Add Account	Log-In With Facebook, Log-In, Sign Up, Forgot Password

Chapter 4 On-Screen Display (OSD) Settings

OSD Menu Controls

Qumi has an On-Screen Display (OSD) settings menu (Menu button can be found on top of the projector or on the remote control) that allows you to make adjustments and change settings, such as display and audio settings. The OSD menu has 11 sub-menus:

- Language – Allows for the selection of the language for the OSD Menu. Press OSD Menu key for entry. Select and move to the desired language using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Input Source – Allows for the selection of the input source for the projector. Press OSD Menu key for entry. Select and move to the desired input source using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Display Mode Settings – Allows for the adjustment of the projector's image display settings to the viewer's preference. The display settings consist of Bright, Presentation, Movie and User modes. Select and move to the desired display mode using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Sound Mode Settings – Select or adjust the projectors audio settings. The audio settings consist of Standard, Music, Movie, Sports, and User modes. Select and move to the desired sound mode using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Colour Temperature - Adjust color temperature of screen and RGB parameters to the user's preference. Select and move to the desired color temperature mode using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Aspect Ratio Modes – Select the aspect ratio to adjust how the image appears on the screen. Select and move to the target mode by using Up/Down Key and then press the Menu or Exit key to confirm and exit.
- Projection Mode – Allows for the selection of the projection mode (Depends on mounting method). Press the Entry button to choose from the available modes.
- Keystone Correction - Corrects misaligned or distorted images so that projection is displayed correctly on the screen. Select and move to the keystone correction mode using the Arrow Keys and then press the Menu or Exit key to confirm and exit.
- Reset All - Restore factory settings and default parameters of the system, including image, sound, projection, keystone, etc.
- Status - Displays relevant system information (such as software version)
- Software update (USB) - Updates system software. Place the software in the root directory of USB drive, and then press OK Key to enter the update confirmation interface and select Yes to update the software.

Note: If the OSD menu is non-active for 10 seconds, it will disappear.



OSD Menu Overview


Use the following table to quickly find a setting or determine the range for a setting.






Main Menu	Submenu/Setting
OSD Languages	Česky, English, Français, Dansk, Español, Hrvatski, Deutsch, Ελληνικά, Italiano, Magyar, Polski, Românește, Nederlands, Português, Slovenščina, Norsk, Русский, Srpski, Suomi, 简体中文, Svenska, 繁體中文, 日本語
Input Source	HDMI, ANDROID
Display Mode Presentations	Bright: Contrast 70, Brightness 60, Color 50, Sharpness 50, Tint 60
	Presentation: Contrast 50, Brightness 50, Color 50, Sharpness 50, Tint 50
	Movie: Contrast 50, Brightness 50, Color 40, Sharpness 50, Tint 50
	User: Contrast 50, Brightness 50, Color 40, Sharpness 50
Sound Mode	Standard: Treble 50, Bass 50
	Music: Treble 75, Bass 75
	Movie: Treble 75, Bass 90
	Sport: Treble 35, Bass 35
	User: Treble 50, Bass 50
Color Temperature	Cool: Red 8, Green 100, Blue 50
	Medium: Red 68, Green 50, Blue 70
	Warm: Red 50, Green 50, Blue 50
	User: Red 0, Green 0, Blue 0
Aspect Ratio	Automatic, 4:3, 16:9, Native
Projection Mode	Front, Front/Ceiling, Rear/Ceiling, Rear
Keystone Correction	Auto: Calibration
	Manual - -40 - +40
Reset All	Are you sure? Yes or No
Status	LED Hours: xx
	Software Version: No. XX.X-XXX.XX.XX
Software Update (USB)	*Follow onscreen steps for software update


OSD Language Settings

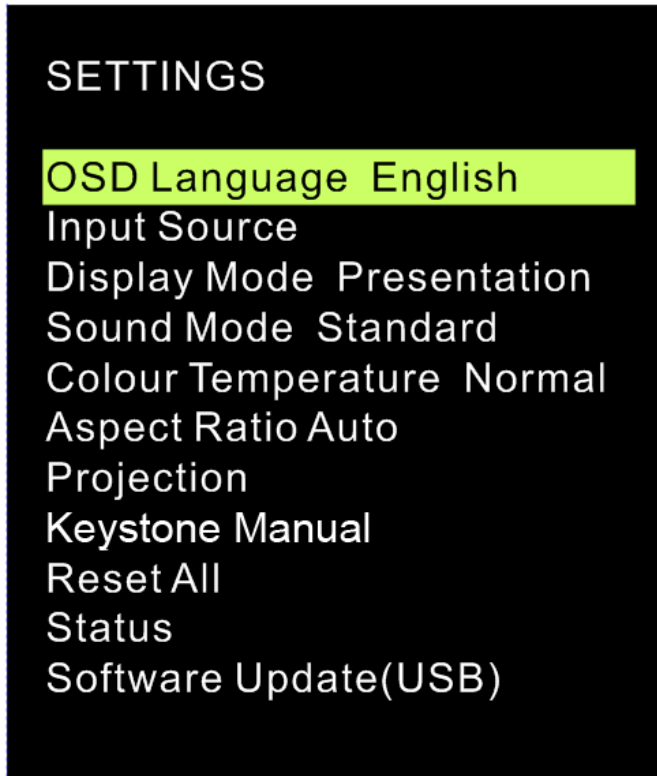Qumi's OSD language menu can be easily changed. Perform the following steps to change the OSD language:

1. Press the OSD Screen Menu button  on the top of the projector or on the remote control to enter the Settings menu.
2. Move the cursor to highlight the menu language, and press .




3. Press , ,  and  buttons to choose the preferred language.
4. Press  button to exit language settings.

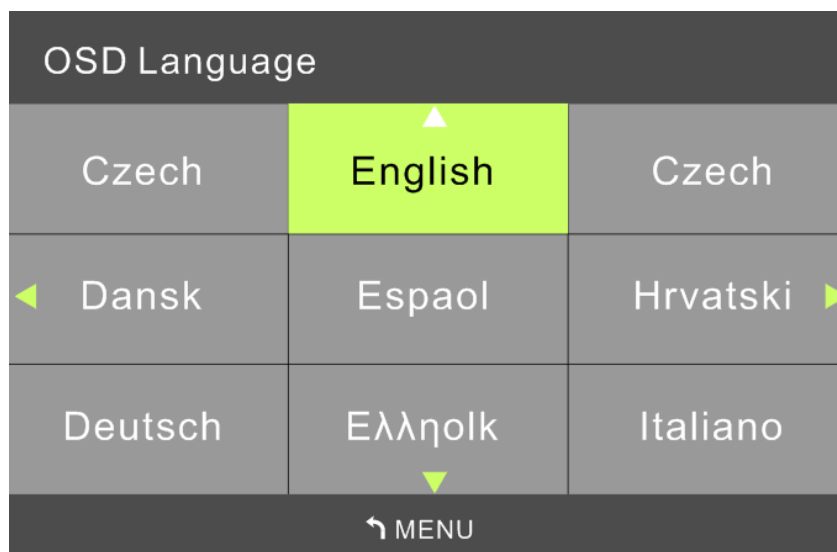




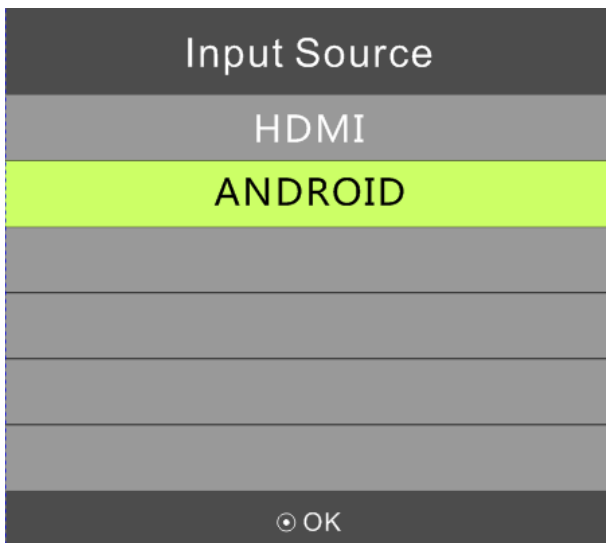
Input Source

Perform the following steps to change the display mode:

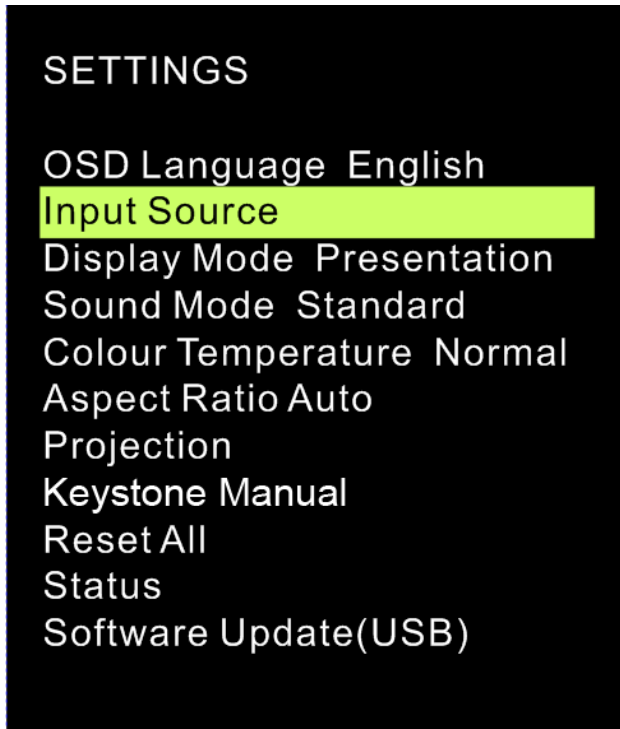1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Input Source, and press  to enter this mode.



3. Press  and  buttons to select the desired Input Source (HDMI, ANDROID).
4. Press  button to exit display mode settings.







Note: User display modes may be adjusted as required by the applications.


Display Mode Settings

Perform the following steps to change the display mode:

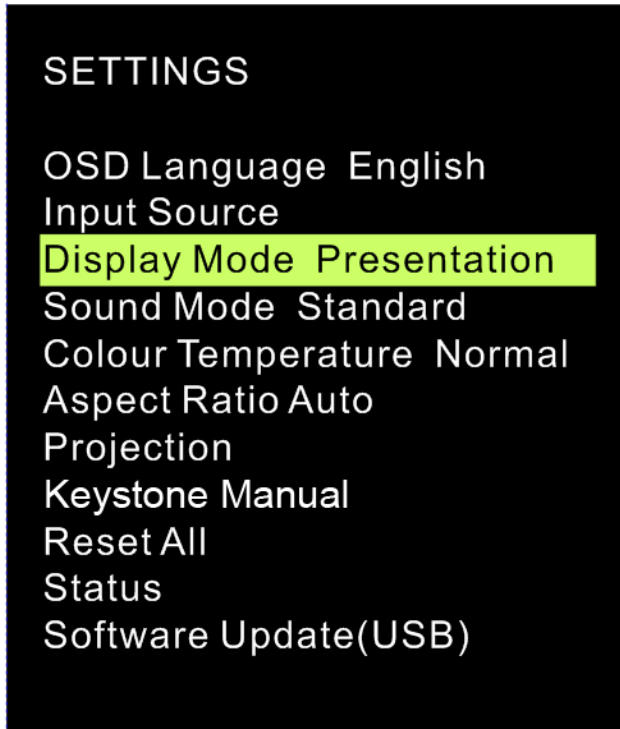1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Display Mode, and press  to enter this mode.



3. Press  and  buttons to select the desired display mode (Presentation, Bright, Movie, User).
4. Press  button to exit display mode settings.

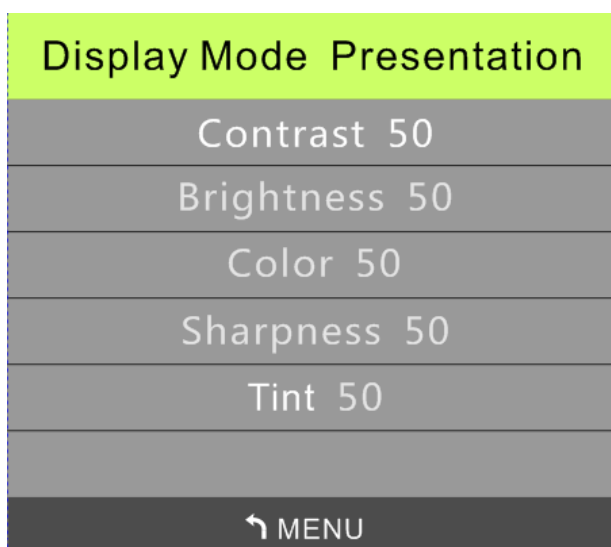




Note: User display modes may be adjusted as required by the applications.






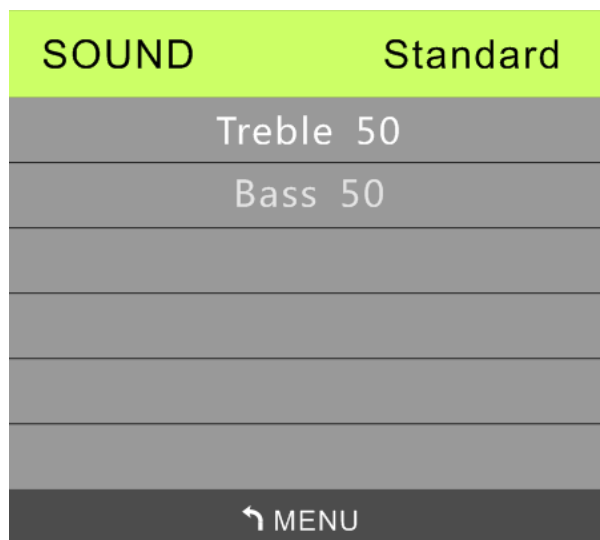
Sound Mode Settings

Perform the following steps to change the sound mode:

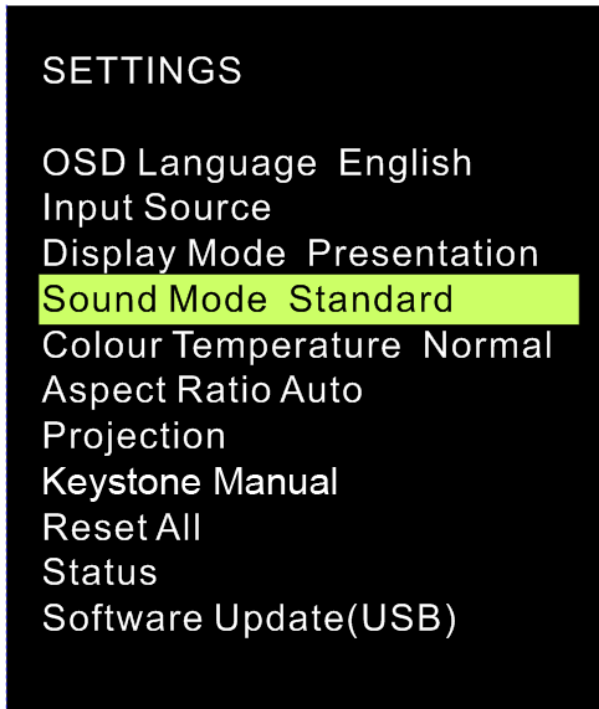1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Sound Mode, and press  to enter this mode.





3. Press  and  buttons to select the desired sound mode (Standard, Music, Movie, Sports and User).
4. Press  button to exit sound mode settings.







Note: Treble and Bass can be adjusted as required by the applications.

Color Temperature Settings

Perform the following steps to change the color temperature settings:

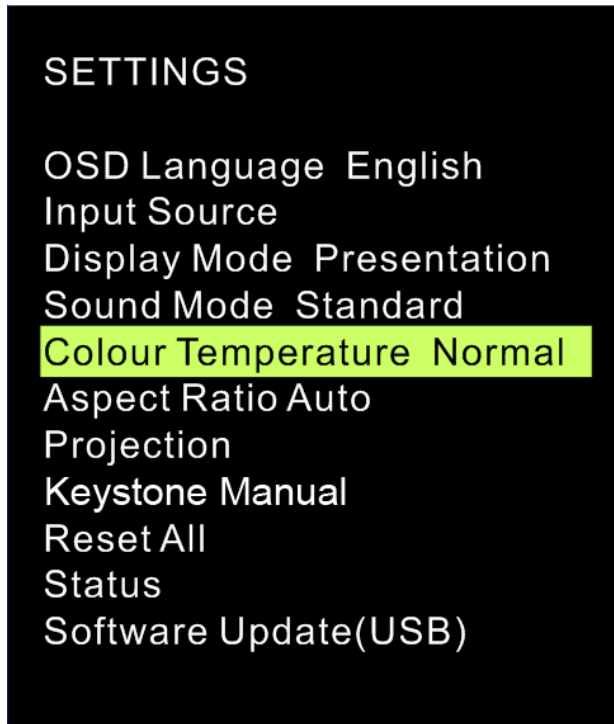1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the color temperature, and press  to enter this mode.





3. Press  and  buttons to select the desired Color Temperature mode.
4. Press  button to exit the Color Temperature mode settings.







Note: Red, green and blue colors can be adjusted as required by the applications.


Aspect Ratio Settings

Perform the following steps to change the projector's aspect ratio:

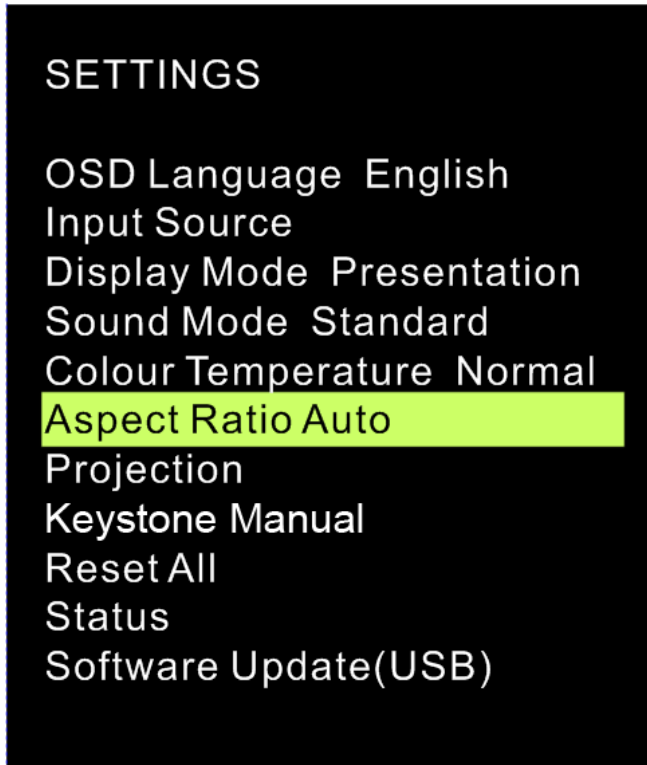1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Aspect Ratio settings and press  to enter this mode.




3. Press  and  buttons to select the desired Aspect Ratio mode.
4. Press  button to exit the Aspect Ratio mode settings.

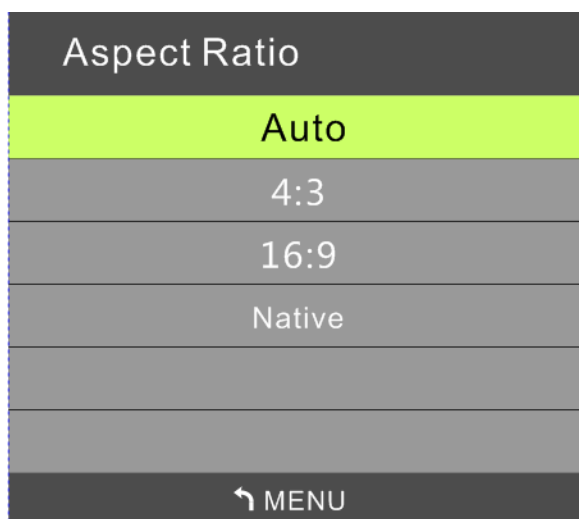



Projection Method Settings

Perform the following steps to change the projector's projection method:

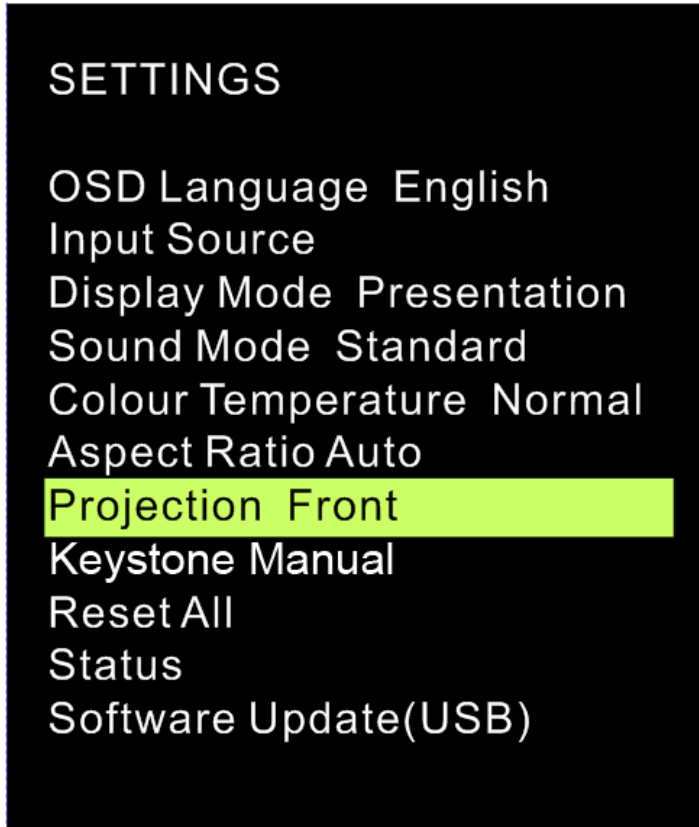1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Projection Method settings and press  to enter this mode.






3. Repeatedly press  button to select the desired projection method (Front, Front/Ceiling, Rear/Ceiling, Rear).
4. Press  button to exit the Projection Method settings.








Keystone Correction Settings

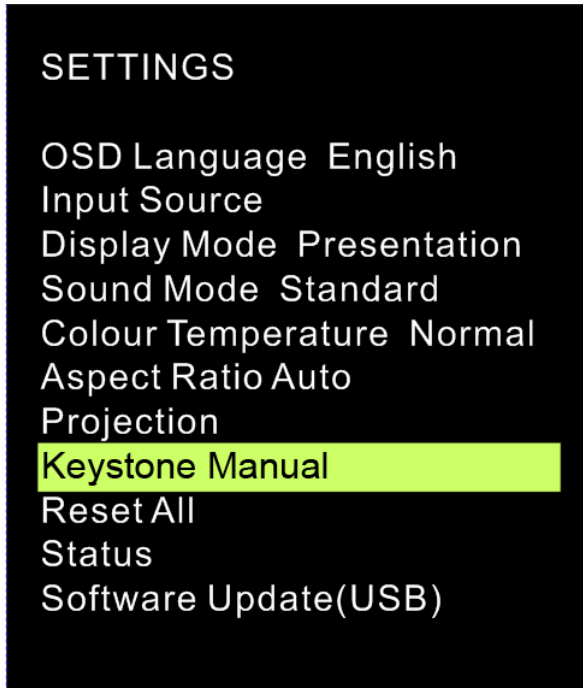Perform the following steps to change the projector's keystone correction:

1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Keystone Correction settings, and press  to enter this mode.





3. Press , ,  and  buttons to select the desired Keystone Correction mode.
4. Press  button to exit the Keystone Correction settings.






*Note: The keystone correction may be adjusted as required by the application.
(Values are between -35 - +35)*


Reset All Settings

Perform the following steps to reset all on the projector:

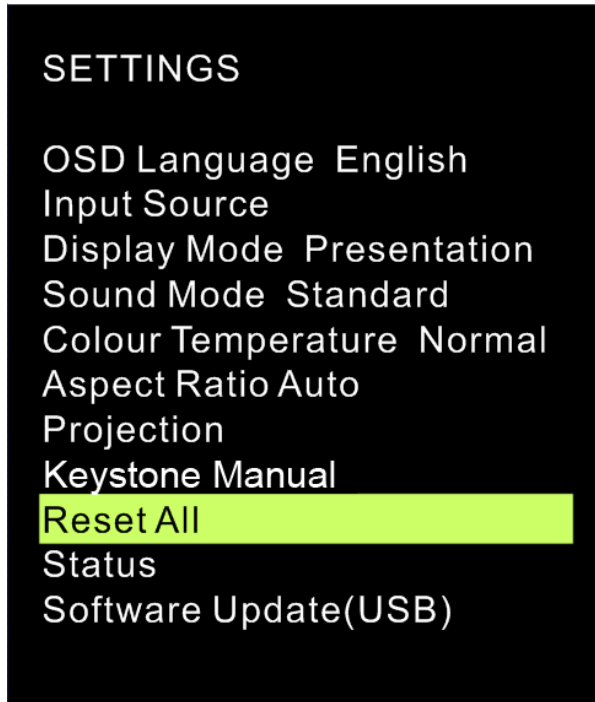1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Reset All settings and press  to enter this mode.



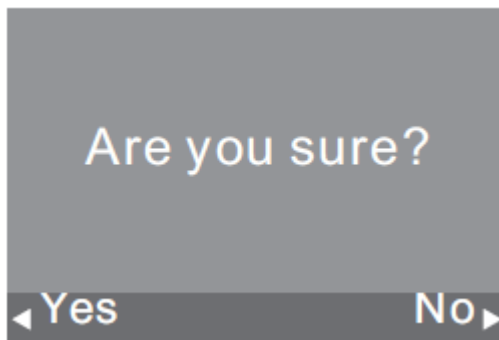


4. Press  button to select Yes and  to select No. After selecting Yes, the Qumi system will be reset to original factory settings.



Status Settings

Perform the following steps to view the projector's status:

1. Press the OSD Screen Menu button  on the top of the projector or the remote control to enter the Settings menu.
2. Move the cursor to highlight the Status settings and press  to enter this mode.

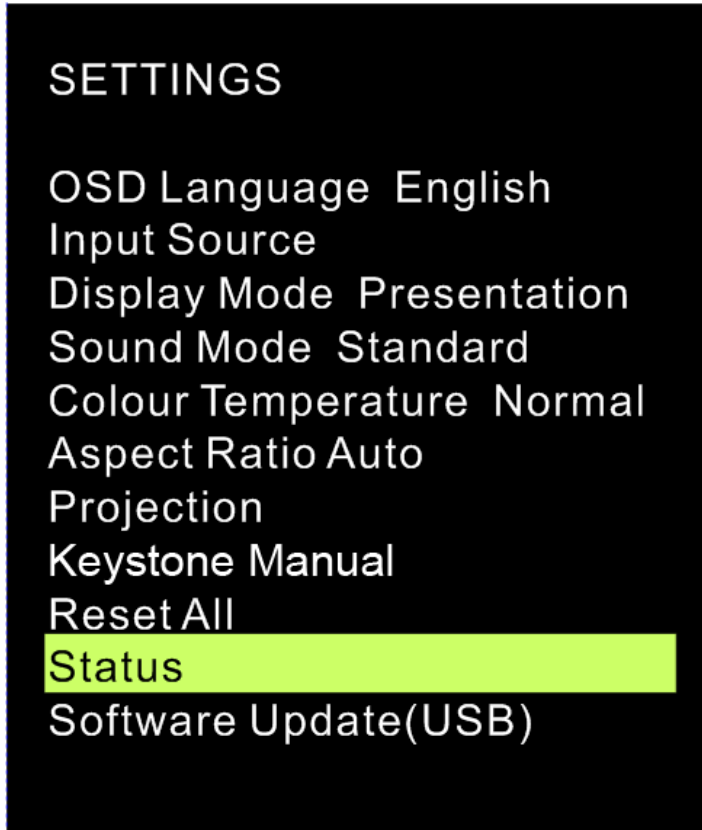

LED Hours :
1
Software Version :
V1.0-2017.9.05
Device ID :
Q38
↶ MENU

Software Update Settings (USB)

1. Download software and unzip file
2. Place software into USB flash drive
File Name: MERGE_DLP30.bin
Note: Place file directly into USB drive (Not in folder)
3. Insert USB flash drive into the USB port (Right side port)
4. Click Menu on the remote control, the Settings menu will appear
5. Scroll down and select "Software Update (USB)"
Follow on-screen instructions for update "Are you sure?"
Select "Yes" by clicking on the left cursor

SETTINGS

OSD Language English
Input Source
Display Mode Presentation
Sound Mode Standard
Colour Temperature Normal
Aspect Ratio Auto
Projection
Keystone Manual
Reset All
Status
Software Update(USB)

Are you sure?

◀ Yes

No ▶

QUMI

Chapter 5 Taking Care of Your Qumi

Cleaning Qumi

Periodically cleaning Qumi to remove dust and grime will help ensure for a trouble-free projection and operation.

 **Warning:**

1. *Qumi should be turned off and unplugged before cleaning. Failure to do so may result in injury or damage to the system.*
2. *Use only a dampened cloth when cleaning. Do not allow water to enter the ventilation openings on Qumi.*
3. *If a small amount of water gets into the interior of Qumi while cleaning, unplug Qumi and set it in a well-ventilated area for several hours before using.*
4. *If a large amount of water gets into the interior of Qumi when cleaning, unplug Qumi and have it serviced.*

Cleaning the Lens

Optical lens cleaning solutions can be purchased from most camera and other retail stores. To clean the Qumi lens, perform the following steps:

1. Apply a small amount of the optic lens cleaning solution to a clean, lint free and soft cloth. (Do not apply the cleaning solution directly to the lens.)
2. Gently wipe the lens in a circular motion.

 **Caution:**

1. Do not use abrasive cleaners or solvents.
2. To prevent discoloration or fading, do not allow the cleaning solution to contact Qumi case.

Troubleshooting

FAQs and Solutions

These guidelines provide tips to deal with problems you may encounter while using Qumi. If the problem remains unresolved, contact your dealer for assistance.

The problem sometimes can be as simple as improper connection of cables. Review the following possible issues before proceeding to the problem-specific solutions.

- Use another electrical device to confirm that the electrical outlet is properly working.
- Make sure that Qumi is turned on.
- Make sure all connections are securely connected.
- Make sure that the connected device is turned on.
- Make sure that the connected PC is not in suspended mode or sleep mode.

Troubleshooting Tips


In each problem-specific section, perform the steps in the order suggested. Doing so may help solve the problem more quickly.

In order to avoid replacing non-defective parts, try to find and isolate the problem

For example, if you replace batteries and the problem remains, put the original batteries back and move to the next step.

Keep a record of the steps you take when troubleshooting. The information may be useful for reference when calling technical support or for bringing Qumi to service personnel.

System Reset Method (Reboot)

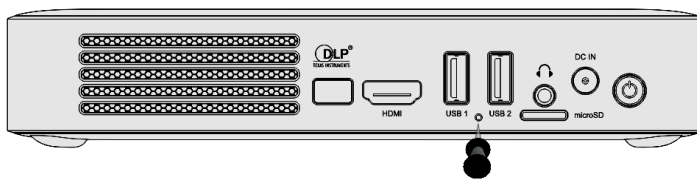

On the rear side of Qumi (below the two USB ports), there is a small pinhole. Insert a paperclip (or similar sized object) into the hole and press for 3 seconds to reboot Qumi.

Image Problems

Problem: No image appears on the screen.

1. Check whether the source (PC, Flash Drive, Camera, Smartphone, etc...) is properly configured.
2. Turn off all of the equipment and power up the equipment again in the correct order.

Problem: The image is blurred

1. Adjust the focus directly via the focus buttons on the projector or remote control
2. Ensure that the distance between the Qumi and the screen is within specified range
3. Clean Qumi lens with optical lens cleaning cloth if it is dirty.

Problem: The image is wider at the top or bottom (trapezoid effect)

1. Position Qumi so that it is as perpendicular to the screen as possible.
2. Adjust the Keystone settings in the OSD to correct the problem.

Problem: The image is reversed

Check the orientation of the Projector Mode setting in the Display menu in the OSD.

Problem: Image without contrast

Adjust the Contrast setting in the Color menu in the OSD.

Problem: The color of the projected image does not match the source image

Adjust the color temperature settings in the Color Temperature setting in the OSD menu.

Remote Control Problems.

Problem: Qumi does not respond to the remote control commands

1. Aim the remote control towards the remote sensor on Qumi.
2. Make sure the path between remote and sensor is not obstructed.
3. Turn off any fluorescent lights in the room.
4. Check to see if the battery polarity is correct.
5. Replace the battery.
6. Turn off other infrared-enabled devices in the vicinity.
7. Have the remote control serviced.

Problem: The remote control's Power On button doesn't switch on the Qumi.

1. Make sure that the Qumi is using the power adapter.

Audio Problems

Problem: There is no sound

1. Adjust the volume on the audio source.
2. Check the audio cable connection.
3. Test the output of the audio source with other speakers.
4. If using Bluetooth, Turn Bluetooth on in Settings and ensure that pairing has occurred.
5. Have Qumi serviced.

Problem: The sound is distorted

1. Check the connection of audio cable.
2. Use other loudspeaker to test output of audio source.
3. Have Qumi serviced.

FAQs

1. Is it possible to connect Qumi to a game console, such as a Microsoft® Xbox or Sony® PS3?

Yes, Qumi can be used to display content from an Xbox or PS3 console. This can be done by connecting the HDMI cable from the game console to Qumi.

2. Can Qumi project content from a television?

Watching television content can be done by connecting a cable box, digital set-top box or satellite receiver directly to Qumi. For example, if a cable box is used, it can be connected by an HDMI cable to Qumi.

3. How are images from a digital camera or a USB storage device displayed?

Images and other content can be displayed by connecting the following devices to Qumi:

- USB flash drive, hard drive, microSD card, card reader
- Digital camera
- Smartphone
- Multimedia storage viewer

Once the devices are connected, images can be displayed by using the Qumi Photo Player.

4. Which cable is required for video devices to be connected with Qumi?

Video devices can be connected to Qumi by using an HDMI cable if the video devices contain an HDMI appropriate ports.

5. What type of video formats does Qumi support?

AVI/RM/RMVB/TS/VOB/MLV/MOV/ISO/WMV/ASF/FLV/DAT/MPG/MPEG

6. What type of audio formats does Qumi support?

MP3,WMA,AAC,WAV/OGG/AC3/DDP/FLAC/APE

7. What type of document formats does Qumi support?

Microsoft® Office 97-2010 (Word, Excel®, PowerPoint®), Adobe® PDF (1.0, 1.1, 1.2, 1.3, 1.4)

8 What type of photo formats does Qumi support?

JPEG/BMP/GIF/PNG

9. How long will the LED light source in Qumi last and can it be replaced?

Qumi does not use a typical light source. It uses a set of Light Emitting Diodes (LED) to illuminate and project images. LED's have a greater lifespan than conventional lamps. The Qumi's LED is estimated to last for approximately 30,000 hours. The lifespan of the LED depends on factors such as brightness, usage, environmental conditions. LED brightness can decrease over time. The LED module is not replaceable.

10. Why do I need to re-adjust the focus on my Qumi after it's powered up?

For the best picture quality, adjustment of the projector or remote controller's Focus-In (+)/Focus-Out (-) Keys may be necessary once the operational temperature has been met.

11. I've lost my remote. Where can I get a replacement?

Contact your Reseller or Vivitek Service via www.vivitekcorp.com (select region) to obtain a replacement remote (Charges may be applied).

12. Bluetooth doesn't work when source is HDMI?

Bluetooth is only supported under Android.

13. Why won't the remote control's Power On button switch on the Qumi?

When the projector is off and not attached to the power adapter, the remote control doesn't support "Power On". Once the power adapter is connected, the remote control's "Power On" feature will function normally.

Vivitek Support Site


Please visit www.vivitekcorp.com and select your region for more information, support and product registration.

Specifications

Model No.:	Qumi Q38	
Native Resolution	FullHD 1080p (1920 x 1080)	
Maximum Resolution	WUXGA (1920 x 1200) / UHD 4K video playback support on Android OS	
Throw Ratio (Distance/Width)	1.2:1	
Image Size (Diagonal)	0.5m - 3.3m (19" - 130")	
Projection Distance	0.5m - 3.5m (1.6ft – 12.5ft)	
Projection Lens	Motorized focus feature on remote control or menu control on projector	
Aspect Ratio	16:9 Native	
Keystone Correction	Vertical $\pm 40^\circ$ (± 40 Steps)	
Operating System	Android™ v6.0	
Wireless	Yes (Internal IEEE 802.11 b/g/n (2.4GHz))	
Bluetooth®	Yes (Bluetooth® 4.0)	
RAM/Storage Expansion	RAM	1GB DDR3
	Internal	8GB (eMMC Flash) (5GB User Availability)
	External	microSD Card Slot (Up to 64GB), USB Flash Drive (Up to 64GB)
Media Player Formats Supported	Office	Microsoft® Office 97-2010 (Word, Excel®, PowerPoint®), Adobe® PDF (1.0, 1.1, 1.2, 1.3, 1.4)
	Video	AVI/RM/RMVB/TS/VOB/MLV/MOV/ISO/WMV/ASF/FLV/DAT/MPG/MPEG
	Photo	JPEG/BMP/GIF/PNG
	Audio	MP3,WMA,AAC,WAV/OGG/AC3/DDP/FLAC/APE
Speakers	2W (x2) (Stereo)	
Tripod Mount	Yes (Standard 1/4-20 L6.3 mm camera mount hole)	
I/O Connection Ports	HDMI v1.4b, Audio Out (3.5mm), USB (Type A) (x2), microSD Card Slot	
Battery Type (Embedded)	12,000 mAh (3.7V) Li-Polymer Rechargeable Battery (Up to 2 hours of usage)	
Power Supply	AC 100-240V, 50/60Hz	
Power Consumption	66W (Normal Mode)	
Operating Temperature	5°C - 35°C (41°F - 95°F)	
Environmental Storage Conditions	-10°C - 40°C (14°F - 104°F), 5% - 70% (N/A Condensation)	
Projection Method	Table Top, Ceiling Mount (Front or Rear)	
Dimensions (W x D x H)	188 x 118 x 34mm (7.3" x 4.6" x 1.3")	
Weight (Approximate)	746g (1.6lbs)	

Note: For questions regarding product specifications, please contact your local dealer.

Projection Distance vs Projection Size

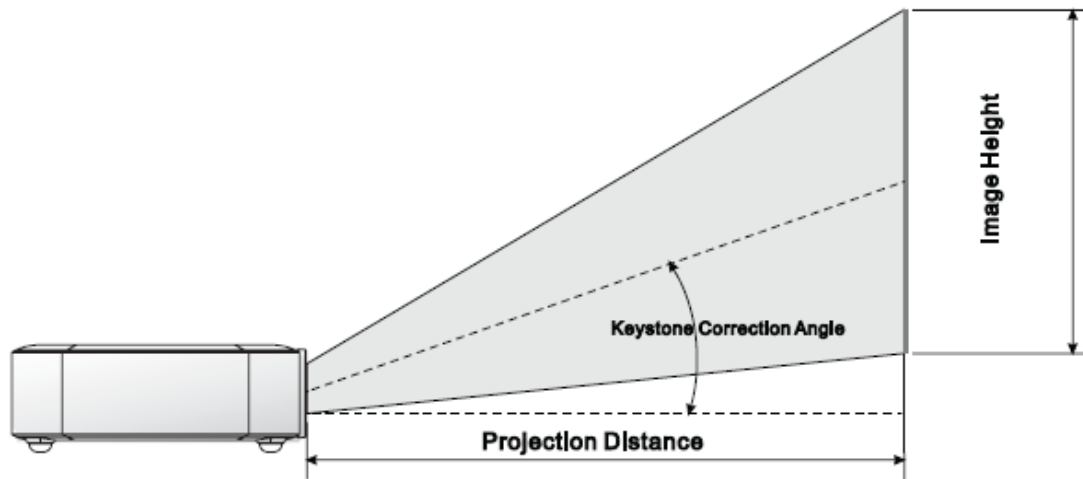

Projection Distance and Size Table


Image Diagonal (cm/inch)	Image Width (cm/inch)	Image Height (cm/inch)	Projection Distance (cm/inch)
76/30	66/26	33/13	77/30
102/40	89/35	43/17	103/40
127/50	111/44	54/21	128/50
152/60	133/52	65/25	154/61
178/70	155/61	76/30	179/71
203/80	177/70	87/34	205/81
229/90	199/78	98/38	231/91

Note: The offset table has a 10% tolerance due to optical component variations.

Timing Mode Table

Resolution	Horizontal Synchronization [KHz]	Vertical Synchronization [HZ]
VESA640x480_60	31.47	59.94
VESA640x480_72	37.86	72.81
VESA640x480_75	37.5	75
VESA800x600_60	37.88	60.32
VESA800x600_72	48.08	72.19
VESA800x600_75	46.88	75
VESA1024x768_60	48.36	60
VESA1024x768_70	56.48	70.07
VESA1024x768_75	60.02	75.03
VESA1280x768_60-RB	47.4	59.99
VESA1280x768_60	47.78	59.87
VESA1280x800_60	49.7	59.81
VESA1280x800_75	62.79	74.93
VESA1280x1024_60	63.98	60.02
VESA1280x1024_75	79.98	75.02
VESA1280x960_60	60	60
VESA1400x1050_60	65.32	59.98
VESA1440x900_60	55.93	59.89
VESA1600x1200_60	75	60
VESA1680x1050_60-RB	64.67	59.88
VESA1680x1050_60	65.29	59.95
VESA1920x1080_60	67.5	60
VESA1920x1200_60-RB	74.04	59.95
IBM-720x400-70	31.467	70.08
MAC-640x480-66	35	66.67
MAC-832x624-75	49.722	74.55
MAC-1024x768-60	48.773	59.99
MAC-1152x870-75	68.681	75.06
SDTV-480i60	15.734	59.94
SDTV-480P59	31.469	59.394
SDTV-576i50	15.625	50
SDTV-576P50	31.25	50
HDTV-720P50	37.5	50
HDTV-720P60	45	60
HDTV-1080i50	28.125	50
HDTV-1080i60	33.75	60
HDTV-1080p24	27	24
HDTV-1080p25	28.13	25
HDTV-1080P30	33.75	30
HDTV-1080P50	56.25	50
HDTV-1080P60	67.5	60

Qumi Dimensions

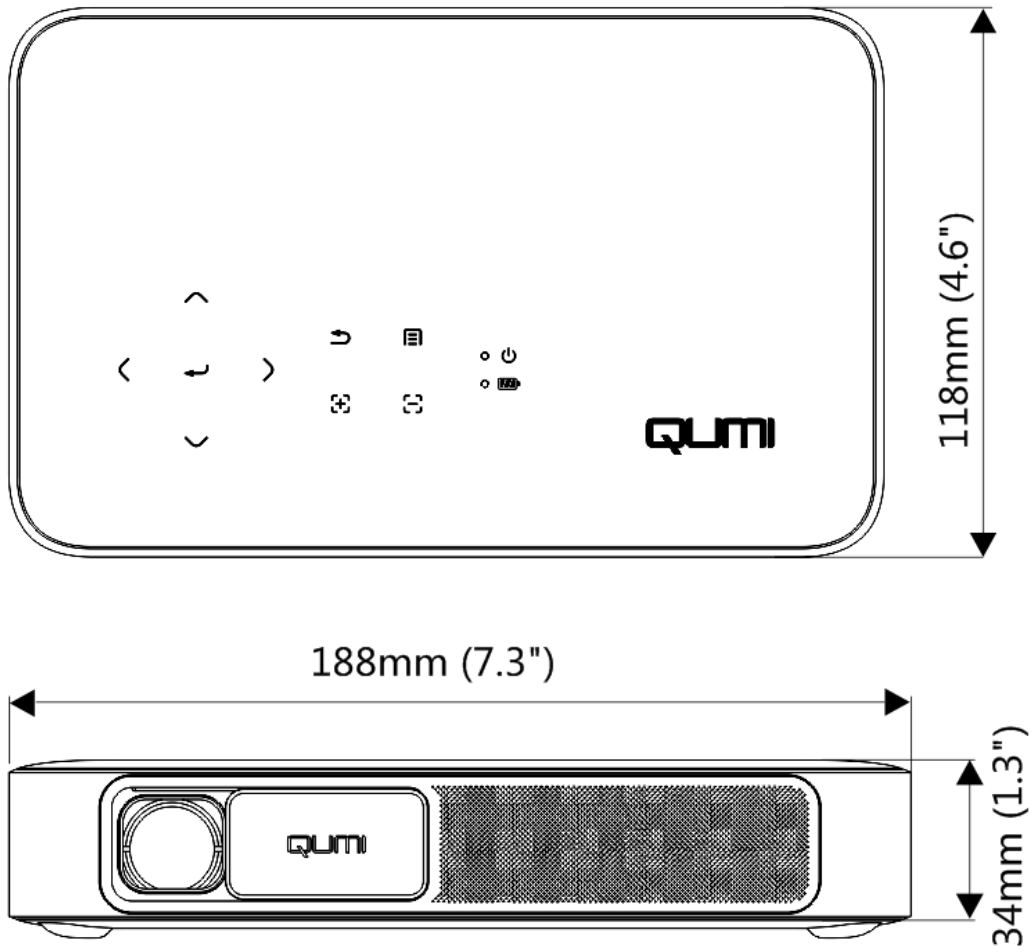

Regulatory Compliance

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Any Changes or modifications not expressly approved by the parties responsible for compliance could void the user's authority to operate the equipment.

Canada

This class B digital apparatus complies with Canadian ICES-003.

Safety Certifications

Projector: CENB, REACH, ROHS, WEEE, FCCID, TUV NORTH AMERICA, SRRC, CB, BQB

Power Adapter: DOE, WEEE, FCC, UL, EAC, TUV-GS, CB, PSB, TUV-S, EAC, KCC, CCC, CECP, BIS, BSMI, ISC

Disposal and Recycling

This product may contain other electronic waste that can be hazardous if not disposed of properly. Recycle or dispose in accordance with local, state, or federal Laws. For more information, contact the Electronic Industries Alliance at www.eiae.org.

